


HONDA



50

MODEL PC50

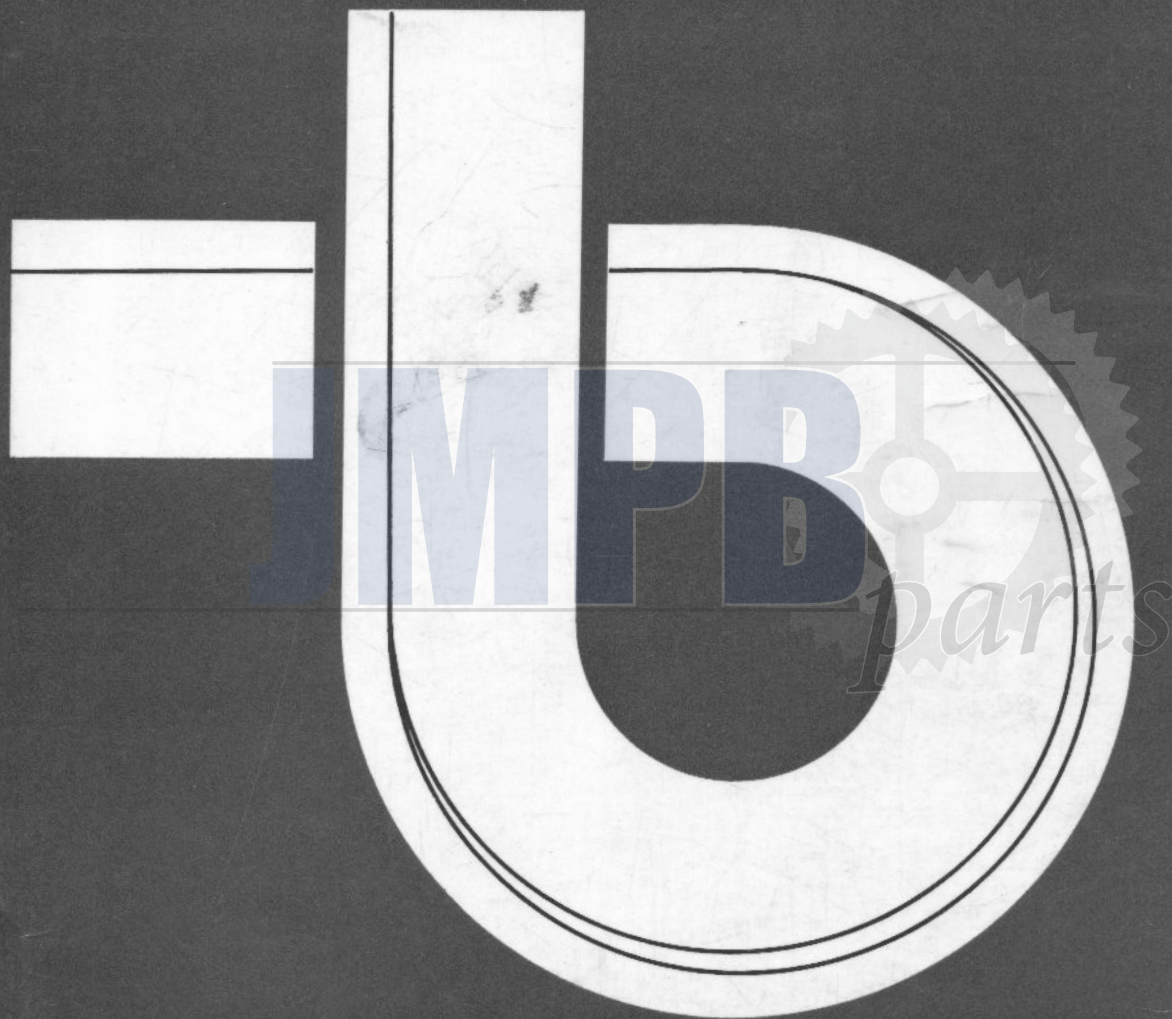

1

PARTS LIST

HONDA GENUINE PARTS

HONDA
GENUINE PARTS



parts

HOW TO USE THIS PARTS LIST

1. This Parts List is used on the Honda 50 Model PC50.
2. In each component block, parts are arranged according to the disassembly procedure except for standard parts such as bolts, nuts which are found at the bottom of the page. Therefore, this list can also be utilized as a manual for servicing as well as for placement of orders for spare parts.
3. Composition of Part Number is as follows:

(General Part)

50100 - 063 - 01 0 D
 Function and Component No. _____
 Model Code No. _____
 Modification Designation _____
 Sub-contractor Designation _____
 Color Code _____

(Bolt)

92000 - 08018 - 0 A
 Component No. _____
 Dimensions _____
 ISO Standard Designation _____
 Surface Treatment Designation _____

(Nut)

94001 - 080 20 - OS
 Component No. _____
 Dimensions _____
 Surface Treatment Designation _____
 ISO Standard Designation _____

4. Announcement on parts modifications will be made with Parts News and/or Revision Sheets.
5. The figure under the heading "No. Used" indicates the number of pieces used in the respective component block.
6. Frame No. is located on the frame below the air cleaner case.
7. Dimensions are indicated in millimeters except for steel balls which are indicated in inches.

8. When modifications are made to a part, the reference number will change as 1-1. 1-2 etc. for the modified part with applicable serial numbers entered for each of it.
9. Placement of orders are requested to be made with our Parts Division under the Part Numbers, not by part descriptions.
10. This Parts List was compiled as of 30th April, 1968.

Honda Motor Co., Ltd.

Service Division

JMPB *parts*

ISO THREADED PARTS

- Not interchangeable with the previous threaded parts -

Threaded parts used in this model conform to the Thread Standard of ISO (International Standardization Organization), and are different from those used in the earlier models.

For servicing this model, therefore, tool set for the earlier models is not sufficient. Socket or box wrenches for 5.5 mm, 7 mm, 12 mm, 22 mm, 24 mm and 27 mm in width across the flats will become necessary.

ISO threads with 3 mm, 4 mm, 5 mm and 12 mm thread diameters are different in pitches from the earlier threads, therefore, confused use of threaded parts will result in damages to threads.

Change in pitch

Thread Diameter	Earlier Pitch	ISO Pitch
3 mm	0.6	0.5
4 mm	0.75	0.7
5 mm	0.9	0.8
12 mm	1.5	1.25

Width across flat

Pitch

Thread diameter

How to identify ISO threaded parts

For easy identification, the following markings are made on the new ISO threaded parts.

Hex. bolts



Presence of figure on the bolt head

Cross screws



Semi-spherical embossement on the head

Nuts



Semi-spherical dimple

They can also be identified by the part numbers.

92000 - 08012 - OA

Those parts with this marking at the end of the part numbers are of ISO threads.

For further details, please refer to Service Bulletin No. 004 dated April 20, 1967.


Koch

PC 5041

3 1/2 Year Kellingstr 21

8777 HHI Molkner

05149-1064

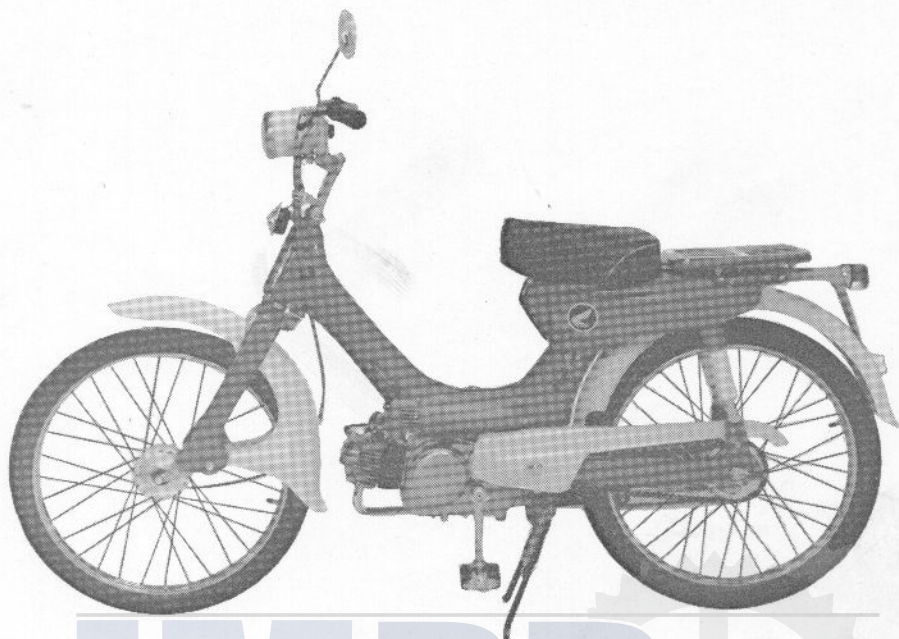


JMPB parts



CONTENTS

Ref. No.	Nomenclature	Page
ENGINE GROUP		
E- 1.....	Cylinder Head Cover	2
E- 2.....	Cylinder Head • Camshaft	4
E- 3.....	Cylinder • Cam Chain	6
E- 4.....	Right Crankcase Cover	8
E- 5.....	Clutch	10
E- 6.....	Crankshaft	12
E- 7.....	Generator	14
E- 8.....	Main Shaft • Counter Shaft.....	16
E- 9.....	Pedal Shaft	18
E-10.....	Right Crankcase • Left Crankcase.....	20
E-11.....	Carburetor (Keihin)	22
FRAME GROUP		
F- 1.....	Steering Handle	24
F- 2.....	Front Fork • Front Fender	28
F- 3.....	Front Cushion.....	30
F- 4.....	Front Wheel	32
F- 5.....	Air Cleaner	34
F- 6.....	Seat • Carrier	36
F- 7.....	Fuel Tank • Right Cover	38
F- 8.....	Chain Case • Rear Fork	40
F- 9.....	Rear Fender • Muffler	42
F-10.....	Pedal • Stand	44
F-11.....	Rear Cushion	46
F-12.....	Rear Wheel	48
F-13.....	Frame Body • Wire Harness	50
F-14.....	Head Light • Tail Light	52
F-15.....	Tail Light (Used in England)	54
F-16.....	Basket Hook • Pillion Step (Optional Parts)	58

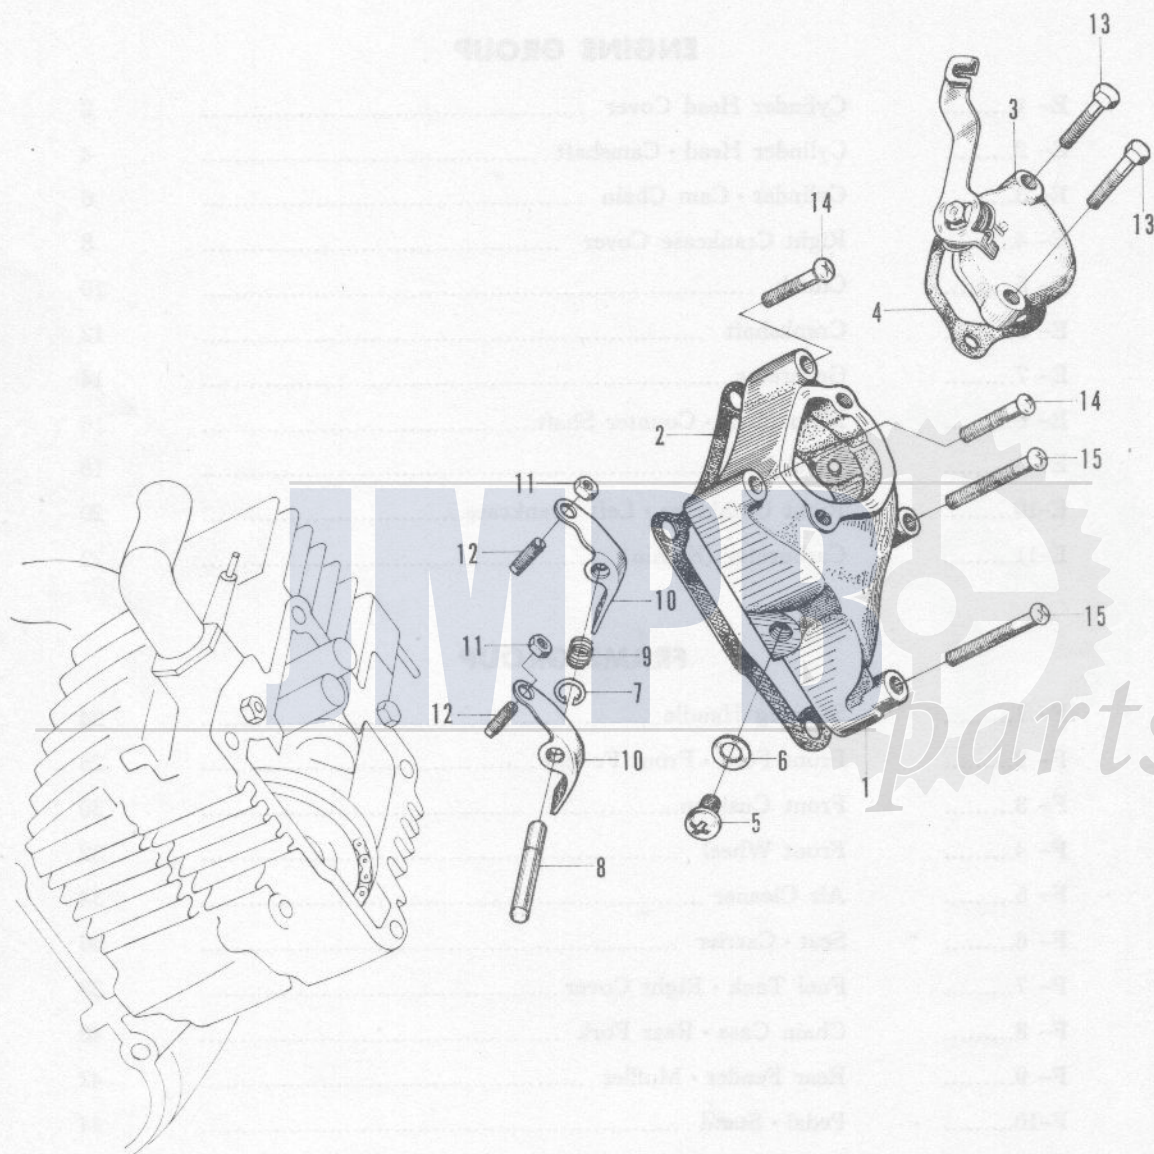

E-1 Cylinder Head Cover


HONDA


Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	12301-063-000	COVER, cylinder head	1	PC50-1000001		
2	12391-044-030	GASKET, cylinder head cover	1	PC50-1000001		
3	12360-063-000	CAP, tappet	1	PC50-1000001		
4	12401-063-303	GASKET, tappet cap.....	1	PC50-1000001		
5	90081-044-000	BOLT, sealing, 8 mm.....	1	PC50-1000001		
6	90488-044-000	WASHER, 8 mm.....	1	PC50-1000001		
7	90603-044-000	CIR-CLIP, 6 mm.....	1	PC50-1000001		
8	14451-044-000	SHAFT, valve rocker arm	1	PC50-1000001		
9	14481-044-000	SPRING, side, rocker arm	1	PC50-1000001		
10	14431-044-030	ARM, valve rocker.....	2	PC50-1000001		
11	90206-001-000	NUT, tappet adjusting	2	PC50-1000001		
12	90012-044-000	SCREW, tappet adjusting.....	2	PC50-1000001		
13	92100-06022	BOLT, hex., 6×22	2			
14	93500-06028	SCREW, pan, 6×28	2			
15	93500-06036	SCREW, pan, 6×36	2			

ENGINE GROUP

JMPB parts

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	16266-063-000	BOLT, set, 6 mm.....	1	PC50-1000001		
2	16267-063-000	WASHER A, 6 mm set bolt	1	PC50-1000001		
3	16268-063-000	WASHER B, 6 mm set bolt	1	PC50-1000001		
4	16265-063-000	BAND, carburetor connecting.....	1	PC50-1000001		
5	90742-044-000	PIN, knock, 3×12	1	PC50-1000001		
6	14120-044-020	PIN, center, camshaft.....	1	PC50-1000001		
7	91302-044-010	O-RING, 6.9×1.5	1	PC50-1000001		
8	14100-044-030	CAMSHAFT.....	1	PC50-1000001		
9	90457-044-010	WASHER A, 10 mm	1	PC50-1000001		
10	14945-063-010	BRACKET, decomp.	1	PC50-1000001		
11	14777-044-010	ADJUSTER, tappet clearance.....	1	PC50-1000001		
12	14771-044-000	RETAINER, valve spring.....	1	PC50-1000001		
13	14772-044-000	RETAINER, valve spring.....	1	PC50-1000001		
14	14751-044-000	SPRING, valve.....	2	PC50-1000001		
15	14781-044-000	SEAT, under, valve spring	2	PC50-1000001		
16	14711-044-680	VALVE, inlet	1	PC50-1000001		
17	14721-044-682	VALVE, exhaust.....	1	PC50-1000001		
18	12200-063-000	HEAD, cylinder	1	PC50-1000001		
19	12021-044-000	GUIDE, inlet valve.....	1	PC50-1000001		
20	12023-044-000	GUIDE, exhaust valve	1	PC50-1000001		
21	12206-044-300	CLIP, valve guide	2	PC50-1000001		
22	90232-063-000	NUT, lock, inlet pipe	1	PC50-1000001		
23	12203-063-310	PIPE, inlet.....	1	PC50-1000001		
24	12204-063-000	RUBBER, inlet pipe	1	PC50-1000001		
25	12251-044-020	GASKET, cylinder head	1	PC50-1000001		
26	94301-08140	PIN, dowel, 8×10A	2			
27	98056-56710	PLUG, sparking	1			
28	92700-06030	BOLT, stud, 6×30.....	2			
29	93500-06080	SCREW, pan, 6×80	1			
30	94001-06000	NUT, hex., 6 mm	4			
31	94101-06000	WASHER, plain, 6 mm	4			

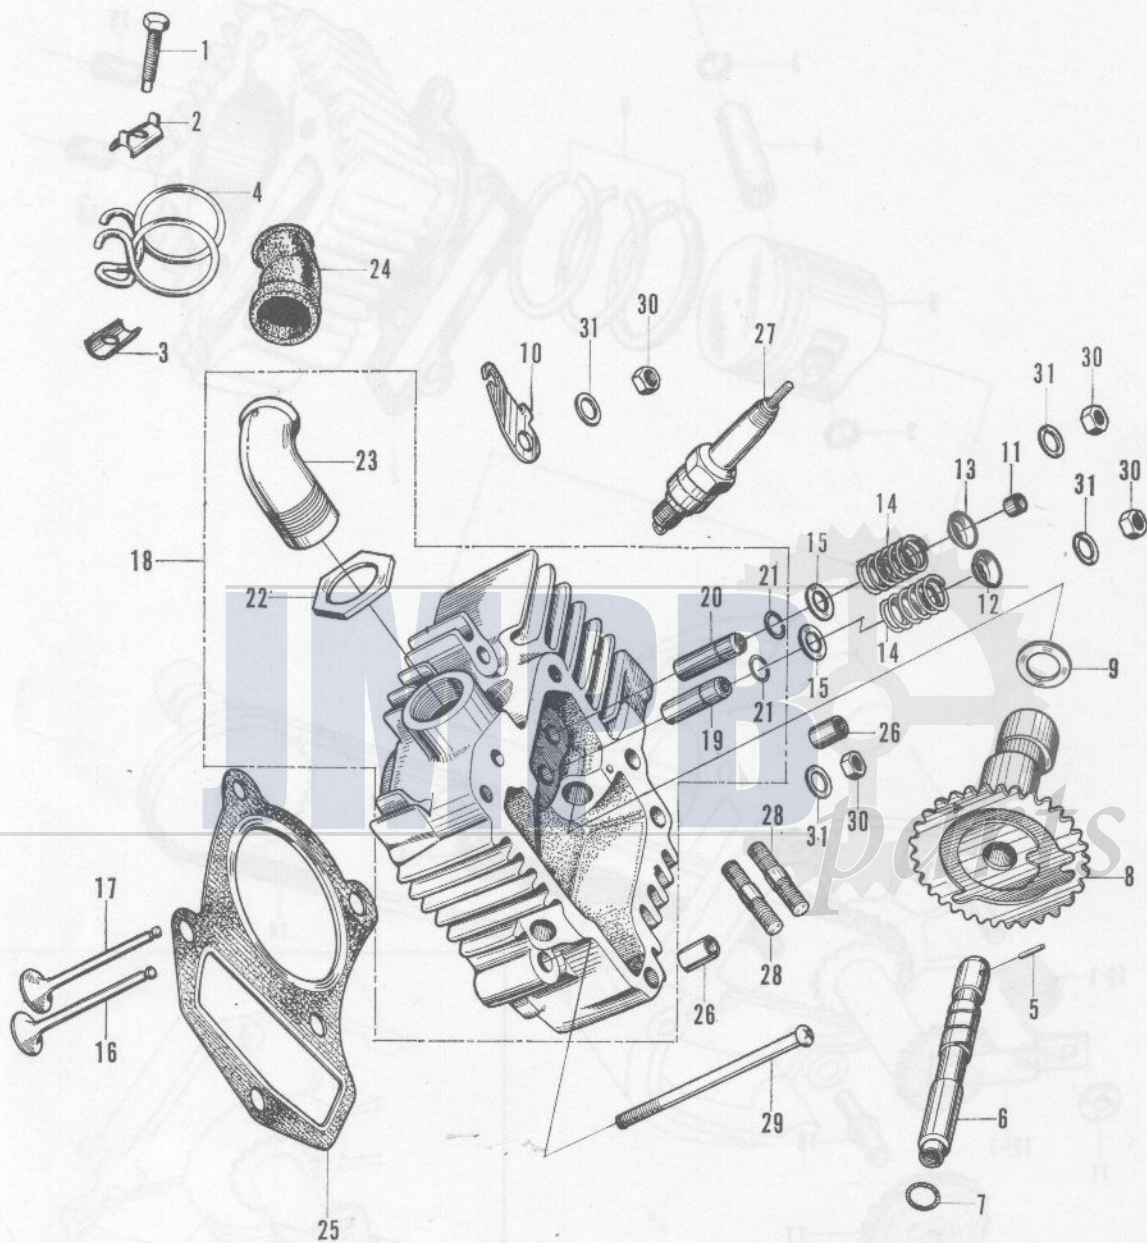

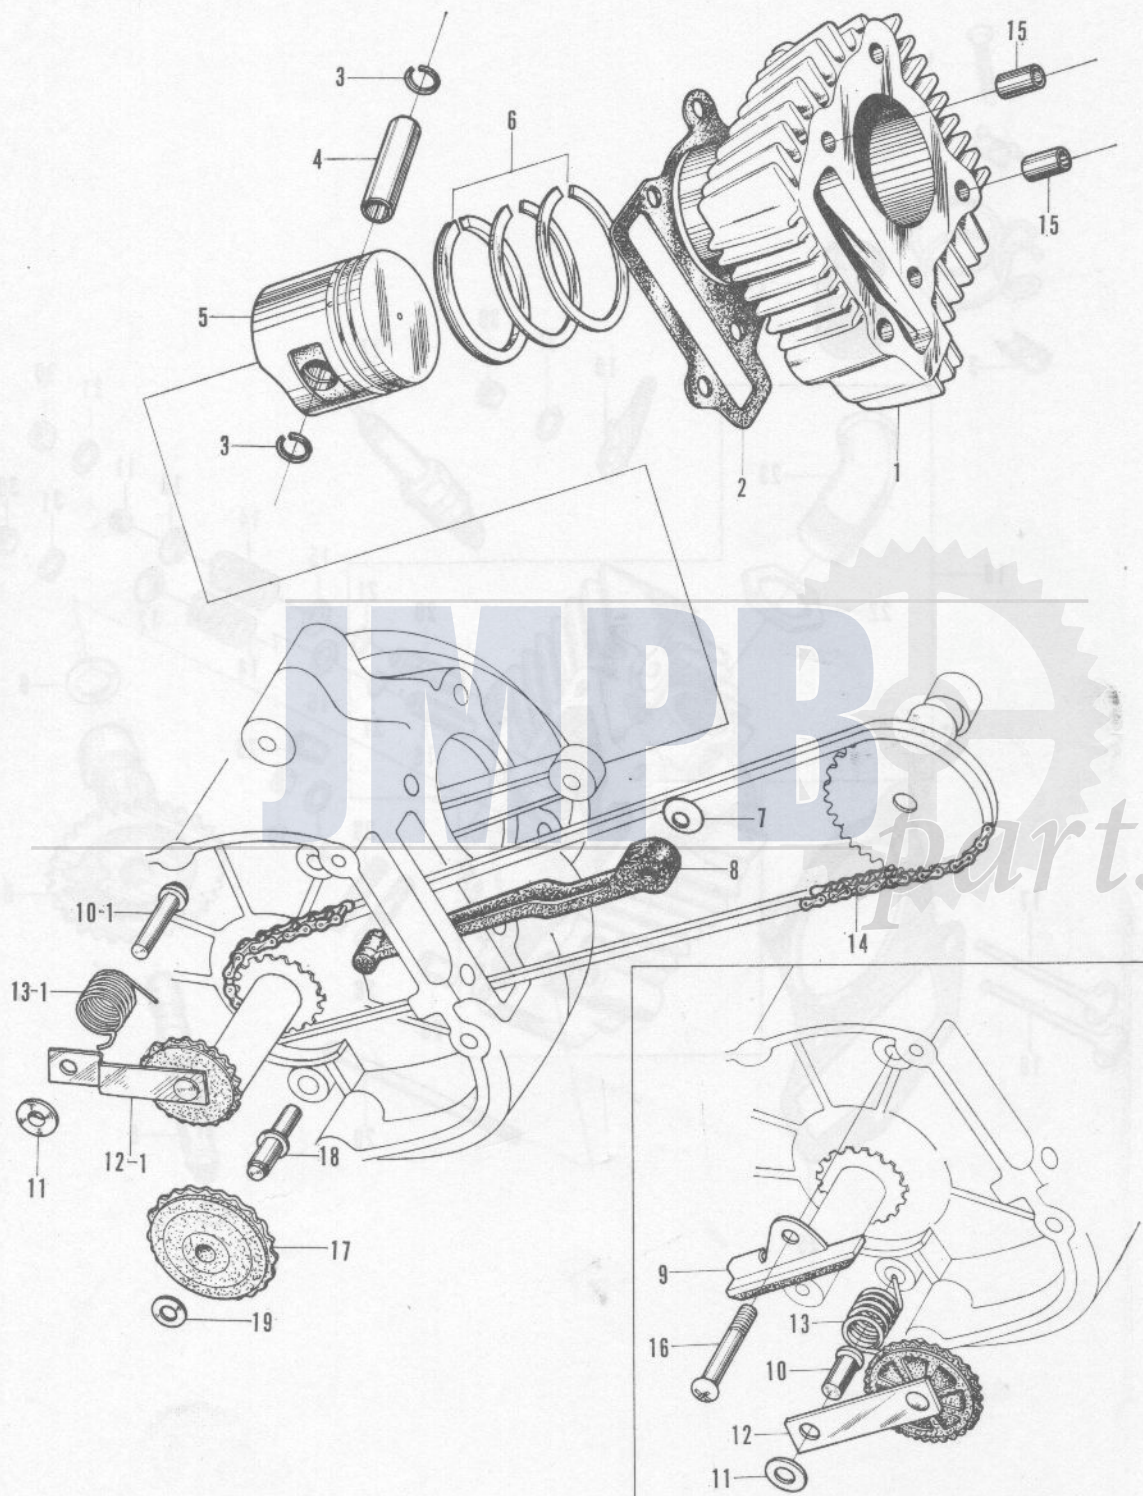


E-3 Cylinder • Cam Chain


HONDA


Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	12101-063-010	CYLINDER	1	PC50-1000001		
2	12191-063-000	GASKET, cylinder	1	PC50-1000001		
3	13115-001-000	CLIP, piston pin	2	PC50-1000001		
4	13111-044-010	PIN, piston	1	PC50-1000001		
5	13101-044-030	PISTON	1	PC50-1000001		
6	13010-044-000	RING-SET, piston	1	PC50-1000001		
7	90458-044-000	WASHER B, 10 mm	1	PC50-1000001		
8	15420-044-060	GUIDE, oil	1	PC50-1000001	PC50-1008605	
● 8-1	15420-063-000	GUIDE, oil	1	PC50-1008606		8006
9	11130-063-020	GUIDE, cam chain	1	PC50-1000001	PC50-1008605	
10	11116-063-300	RIVET, 4 mm	1	PC50-1000001	PC50-1008605	
● 10-1	11116-063-310	RIVET, 4 mm	1	PC50-1008606		8006
11	90445-063-300	WASHER, 4 mm	1	PC50-1000001		
12	11120-063-310	TENSIONER, cam chain	1	PC50-1000001	PC50-1008605	
● 12-1	11120-063-320	TENSIONER, cam chain	1	PC50-1008606		8006
13	11117-063-300	SPRING, cam chain tensioner	1	PC50-1000001	PC50-1008605	
● 13-1	11117-063-330	SPRING, cam chain tensioner	1	PC50-1008606		8006
14	14401-044-000	CHAIN, cam	1	PC50-1000001		
15	94301-08140	PIN, dowel, 8×14A	2			
16	93500-06045	SCREW, pan, 6×45	1			
● 16-1	93500-06040	SCREW, pan, 6×40	1	PC50-1008606		8006
● 17	11122-044-310	ROLLER, cam chain tensioner	1	PC50-1008606		8006
● 18	11141-063-300	PIN, guide roller	1	PC50-1008606		8006
● 19	90441-044-300	WASHER, thrust, 4 mm	1	PC50-1008606		8006

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	11331-063-020	COVER, right crankcase	1	PC50-1000001		
2	11332-063-000	LABEL, oil	1	PC50-1000001		
3	11394-063-010	PACKING, right crankcase cover	1	PC50-1000001		
4	24615-044-010	GUIDE, free pole	1	PC50-1000001		
5	24612-063-000	CAP, free pawl slider	1	PC50-1000001		
6	24611-063-700	SLIDER, free pawl	1	PC50-1000001		
7	91212-063-005	OIL-SEAL, 5•30•6 (Nihon Oil-Seal)	1	PC50-1000001		
8	90456-063-000	WASHER, 5×30	1	PC50-1000001		
9	15650-063-000	GAUGE, oil	1	PC50-1000001		
10	91311-044-000	O-RING, 18×3	1	PC50-1000001		
11	28252-064-000	CAP, kick spindle hole	1	PC50-1000001		
12	91204-063-003	OIL-SEAL, 16•26•6 (Arai)	1	PC50-1000001		
13	93500-06025	SCREW, pan, 6×25	4			
14	93500-06032	SCREW, pan, 6×32	1			
15	93500-06090	SCREW, pan, 6×90	2			
16	93500-06100	SCREW, pan, 6×100	1			

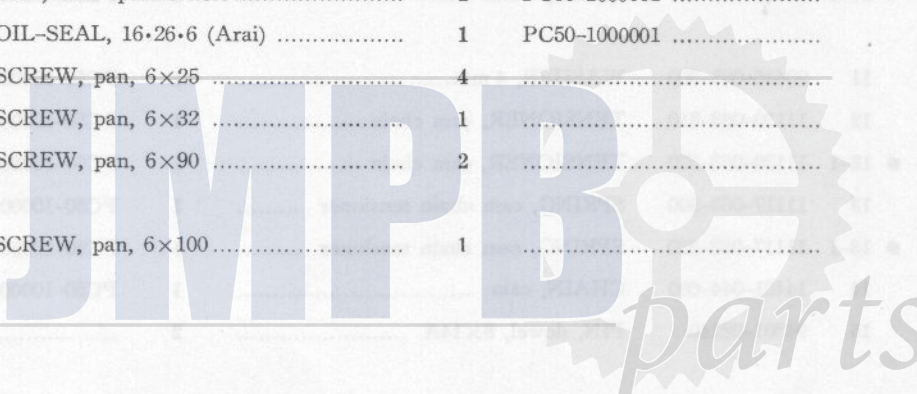

E-4 Right Crankcase Cover

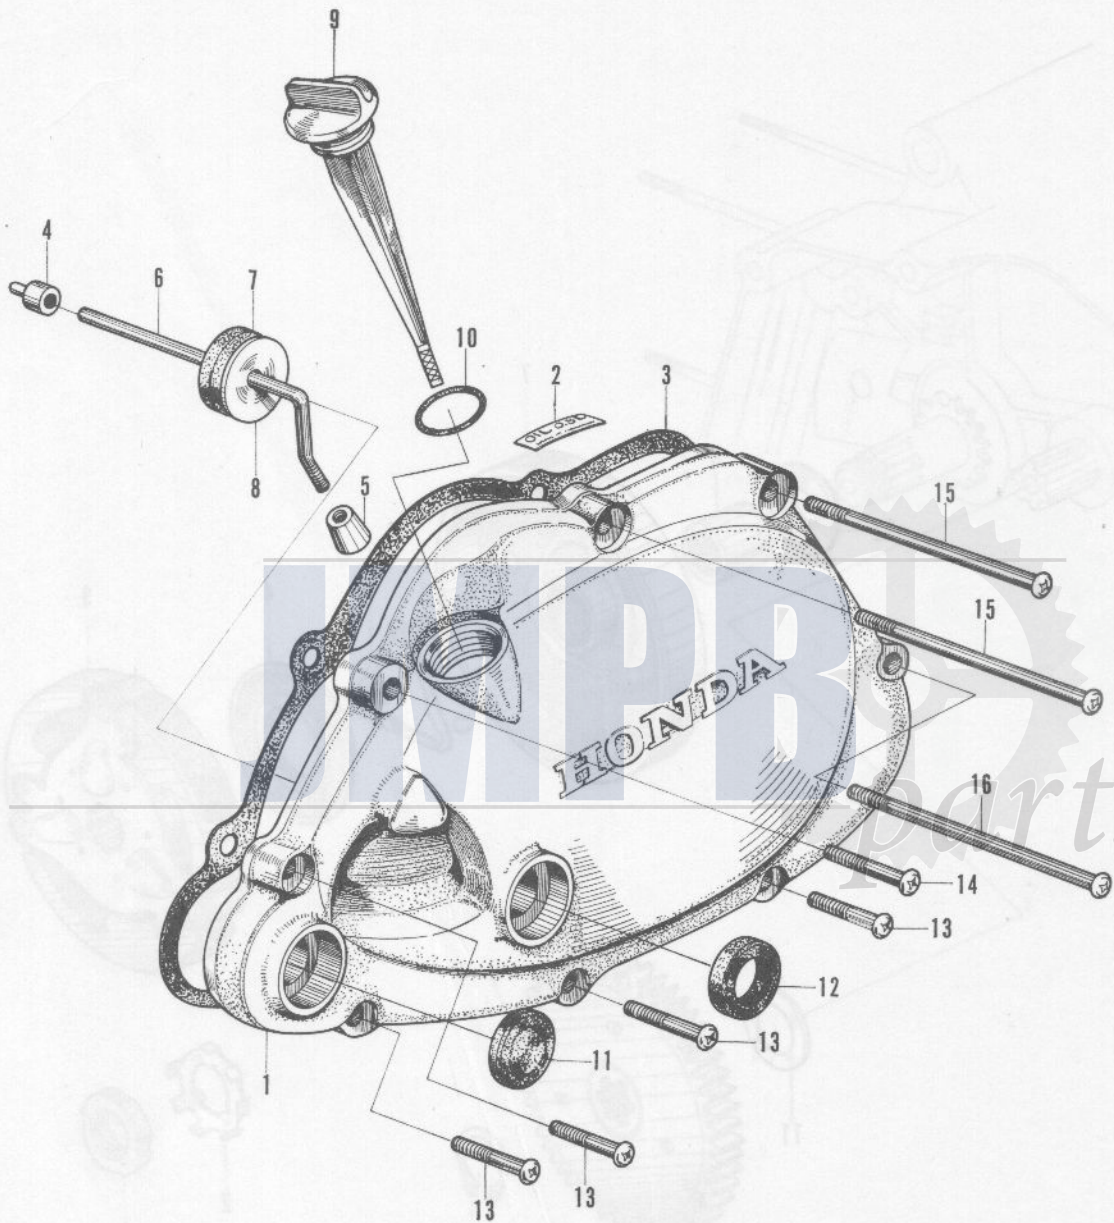HONDA

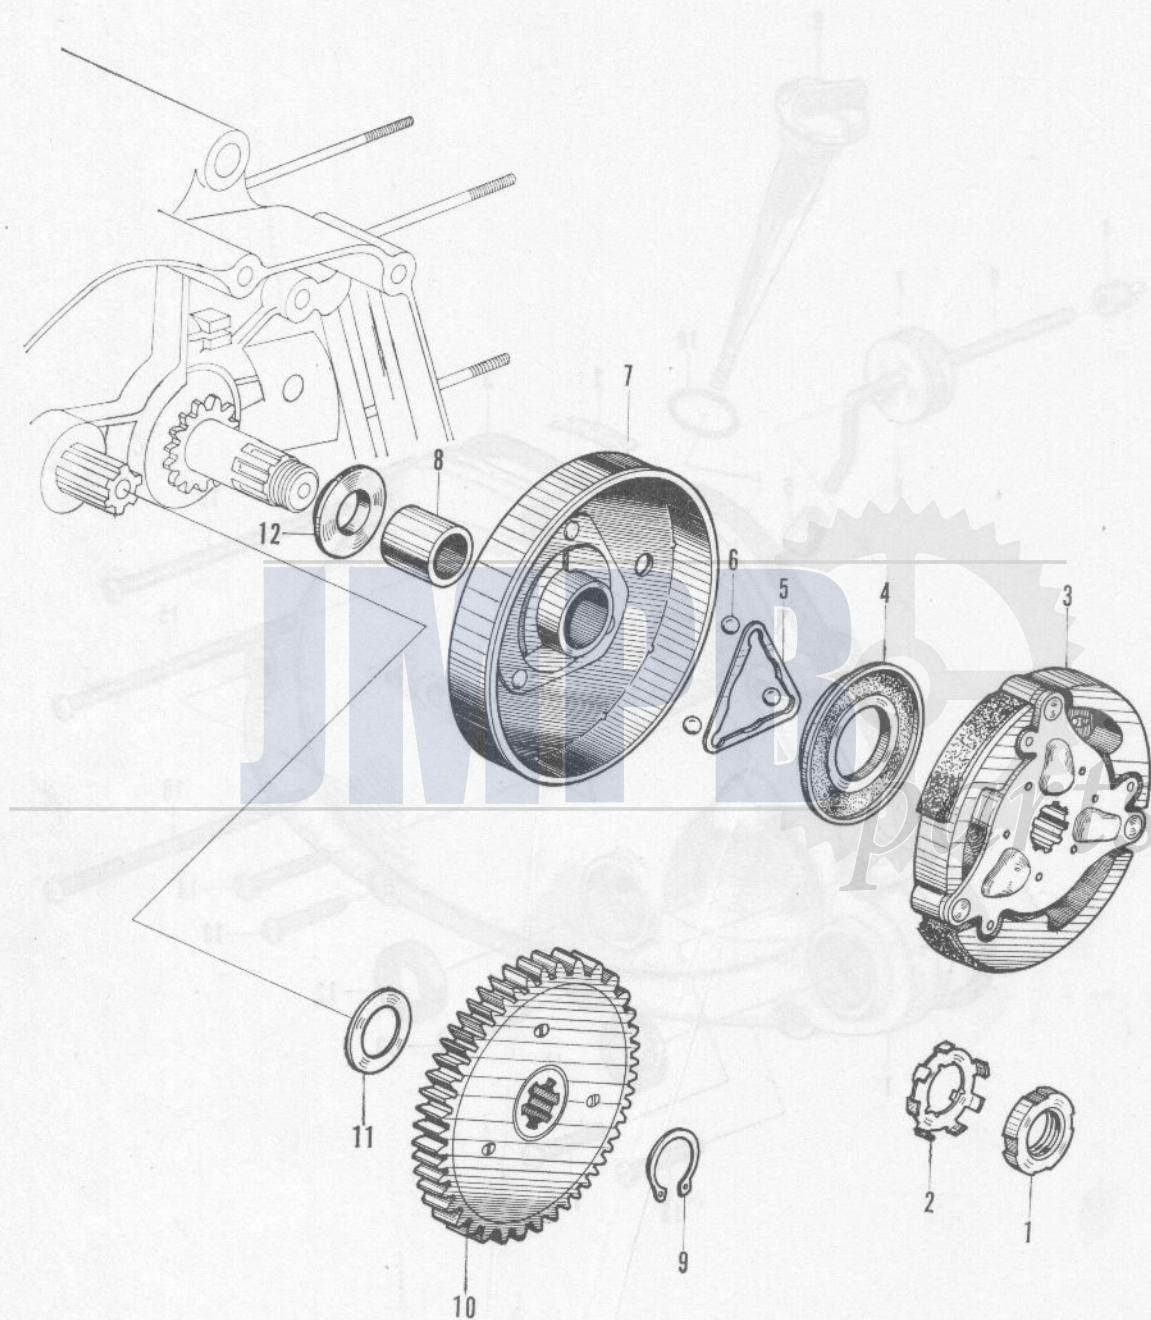


E-5 Clutch**HONDA**


Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	90231-041-000	NUT, lock, 14 mm	1	PC50-1000001		
2	90443-044-000	WASHER, lock, 14 mm.....	1	PC50-1000001		
3	22300-044-000	PLATE, drive	1	PC50-1000001		
4	22201-044-050	PLATE, friction	1	PC50-1000001		
5	22802-044-000	RETAINER, ball.....	1	PC50-1000001		
6	90921-044-000	BALL, clutch	3	PC50-1000001		
7	22100-063-000	OUTER, clutch	1	PC50-1000001		
8	22131-044-020	GUIDE, clutch center	1	PC50-1000001		
9	94510-17000	CIR-CLIP, external, 17 mm.....	1	PC50-1000001		
10	23110-063-000	GEAR, primary driven (51T)	1	PC50-1000001		
11	90451-040-000	WASHER, thrust, 17 mm	1	PC50-1000001		
12	14315-044-010	COLLAR, timing sprocket distance	1	PC50-1000001		

JMPB
parts

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	13000-063-020	CRANKSHAFT ASSY.	1	PC50-1000001		
2	14311-063-310	SPROCKET, timing (15T)	1	PC50-1000001		
3	96100-62030	BEARING, ball, 6203.....	1			
4	96100-62020	BEARING, ball, 6202.....	1			
5	13311-063-310	CRANKSHAFT, right	1	PC50-1000001		
6	13321-063-310	CRANKSHAFT, left	1	PC50-1000001		
7	13381-063-300	PIN, crank.....	1	PC50-1000001		
8	13201-063-300	ROD, connecting	1	PC50-1000001		
9	91101-205-010	ROLLER, 2.5×8.5	20	PC50-1000001		
10	13211-044-030	RETAINER, roller	1	PC50-1000001		
11	90741-044-000	PIN, knock, 3×4.....	1	PC50-1000001		

JMPB parts

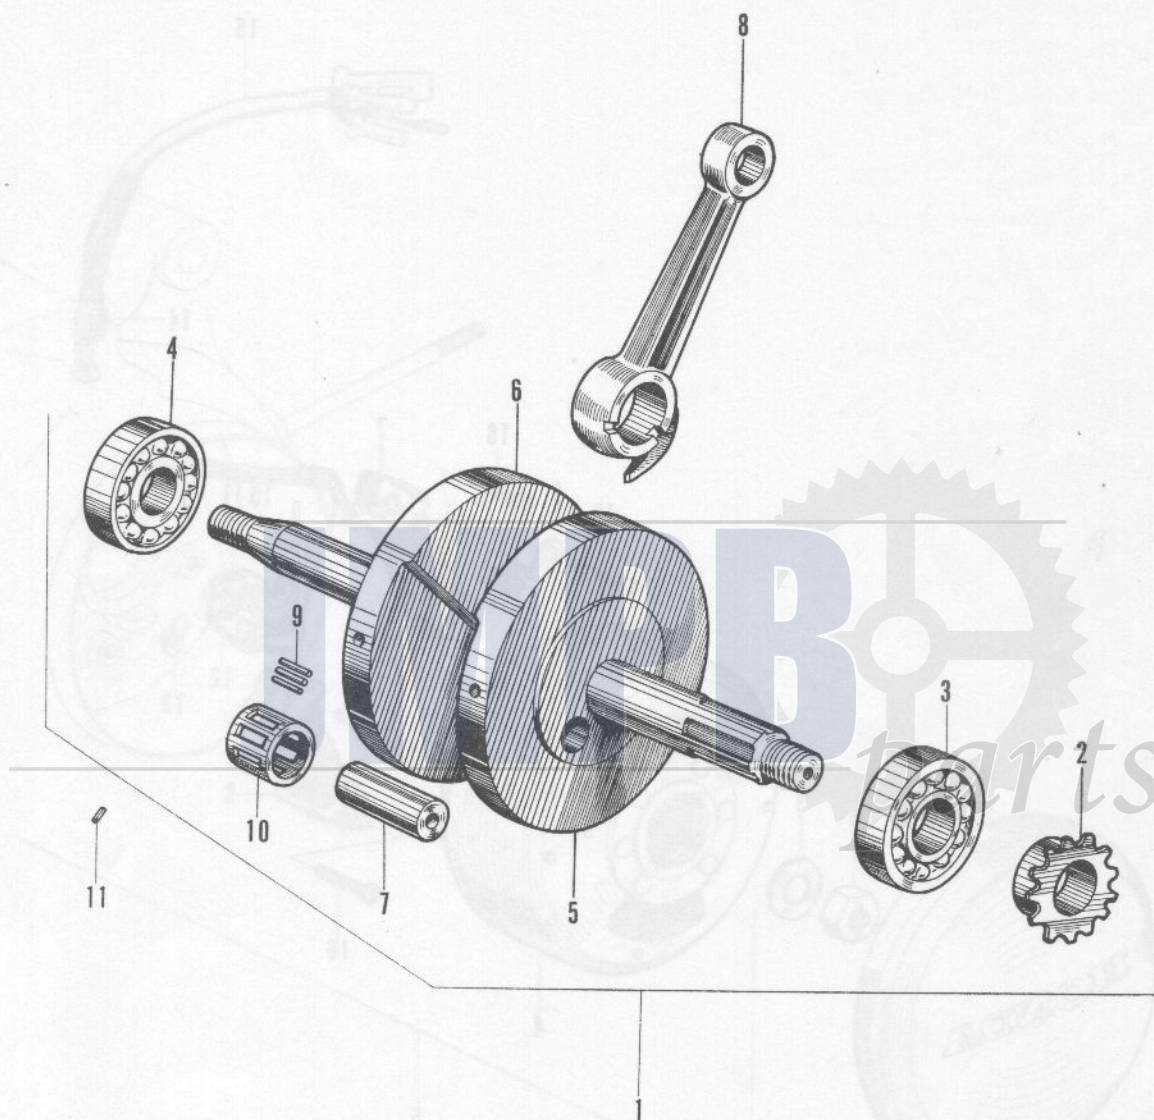


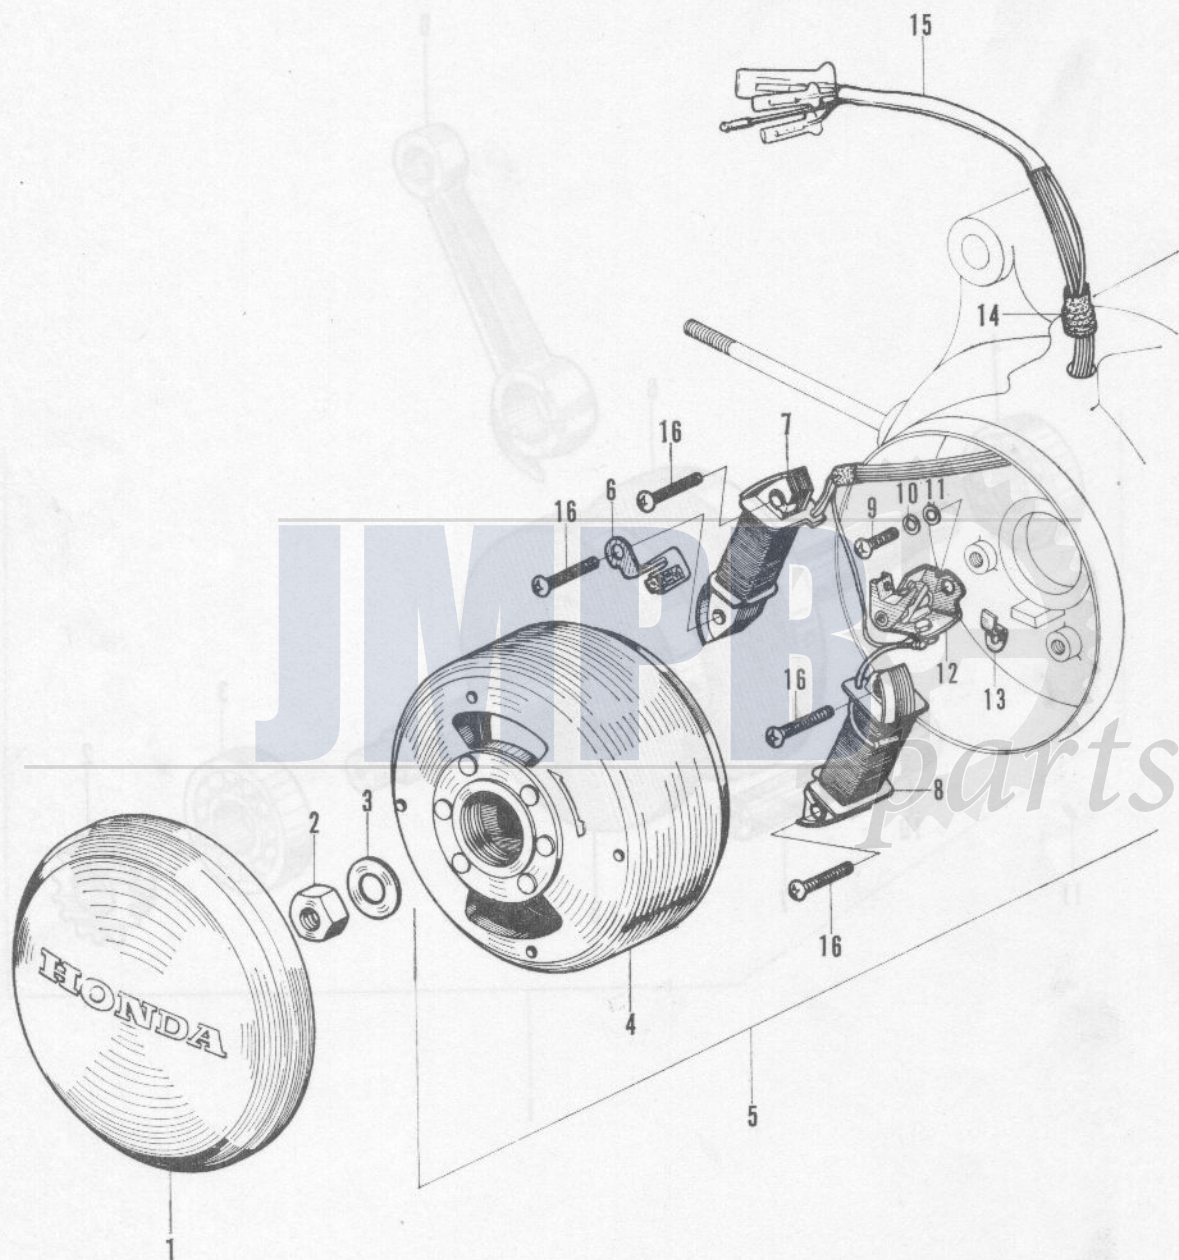


Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	11431-063-000	COVER, dynamo.....	1	PC50-1000001		
2	90201-044-000	NUT, 10 mm.....	1	PC50-1000001		
3	90426-001-000	WASHER, magneto fixing	1	PC50-1000001		
4	31121-063-004	FLYWHEEL (Nippon Denso)..... (Used in General)	1	PC50-1000001		
	31121-063-601	FLYWHEEL (Nippon Denso)..... (Used in England)	1	PC50-1000001		
	31121-063-621	FLYWHEEL (Nippon Denso)..... (Used in France)	1	PC50-1000001		
5	31100-063-004	A.C. GENERATOR ASSY., flywheel ... (Nippon Denso) (Used in General)	1	PC50-1000001		
	31100-063-601	A.C. GENERATOR ASSY., flywheel ... (Nippon Denso) (Used in England)	1	PC50-1000001		
	31100-063-621	A.C. GENERATOR ASSY., flywheel ... (Nippon Denso) (Used in France)	1	PC50-1000001		
6	30205-044-014	FELT, oil (Nippon Denso)	1	PC50-1000001		
7	31632-063-004	COIL, lamp (Nippon Denso)	1	PC50-1000001		
		(Used in General)				
	31632-063-601	COIL, lamp (Nippon Denso)	1	PC50-1000001		
		(Used in England)				
	31632-063-621	COIL, lamp (Nippon Denso)	1	PC50-1000001		
		(Used in France)				
8	30541-063-004	COIL, primary (Nippon Denso).....	1	PC50-1000001		
9	30207-063-004	SCREW, breaker set (Nippon Denso) ...	1	PC50-1000001		
10	30208-063-004	WASHER, spring (Nippon Denso)	1	PC50-1000001		
11	30209-063-004	WASHER, plain (Nippon Denso)	1	PC50-1000001		
12	30202-063-004	BREAKER ASSY., contact	1	PC50-1000001		
		(Nippon Denso)				
13	32957-063-010	CLAMPER, dynamo cord	1	PC50-1000001		
14	32956-063-300	GROMMET, dynamo cord	1	PC50-1000001		
15	32958-044-000	COVER, wire harness	1	PC50-1000001		
16	93500-04020-0A	SCREW, pan, 4×20	4			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	90451-040-000	WASHER, thrust, 17 mm	1	PC50-1000001		
2	23211-063-010	SHAFT, main, transmission (14T).....	1	PC50-1000001		
3	90451-001-000	WASHER, thrust, 14 mm	1	PC50-1000001		
4	23805-063-010	COVER, drive chain	1	PC50-1000001		
5	23802-040-000	PLATE, drive sprocket fixing.....	1	PC50-1000001		
6	23801-063-000	SPROCKET, drive (15T)	1	PC50-1000001		
● 7	23226-063-700	GEAR, counter, transmission (45T)	1	PC50-1000001		8004
8	24111-044-010	POLE, free	1	PC50-1000001		
9	24621-044-020	SPRING, free pole	1	PC50-1000001		
10	23221-063-040	SHAFT, counter, transmission (12T) ...	1	PC50-1000001		
11	91203-035-000	OIL-SEAL, 17·29·5	1	PC50-1000001		
12	96100-60030	BEARING, ball, 6003.....	1			
13	94510-25000	CIR-CLIP, external, 25 mm.....	1			
14	92100-06008	BOLT, hex., 6×8	2			



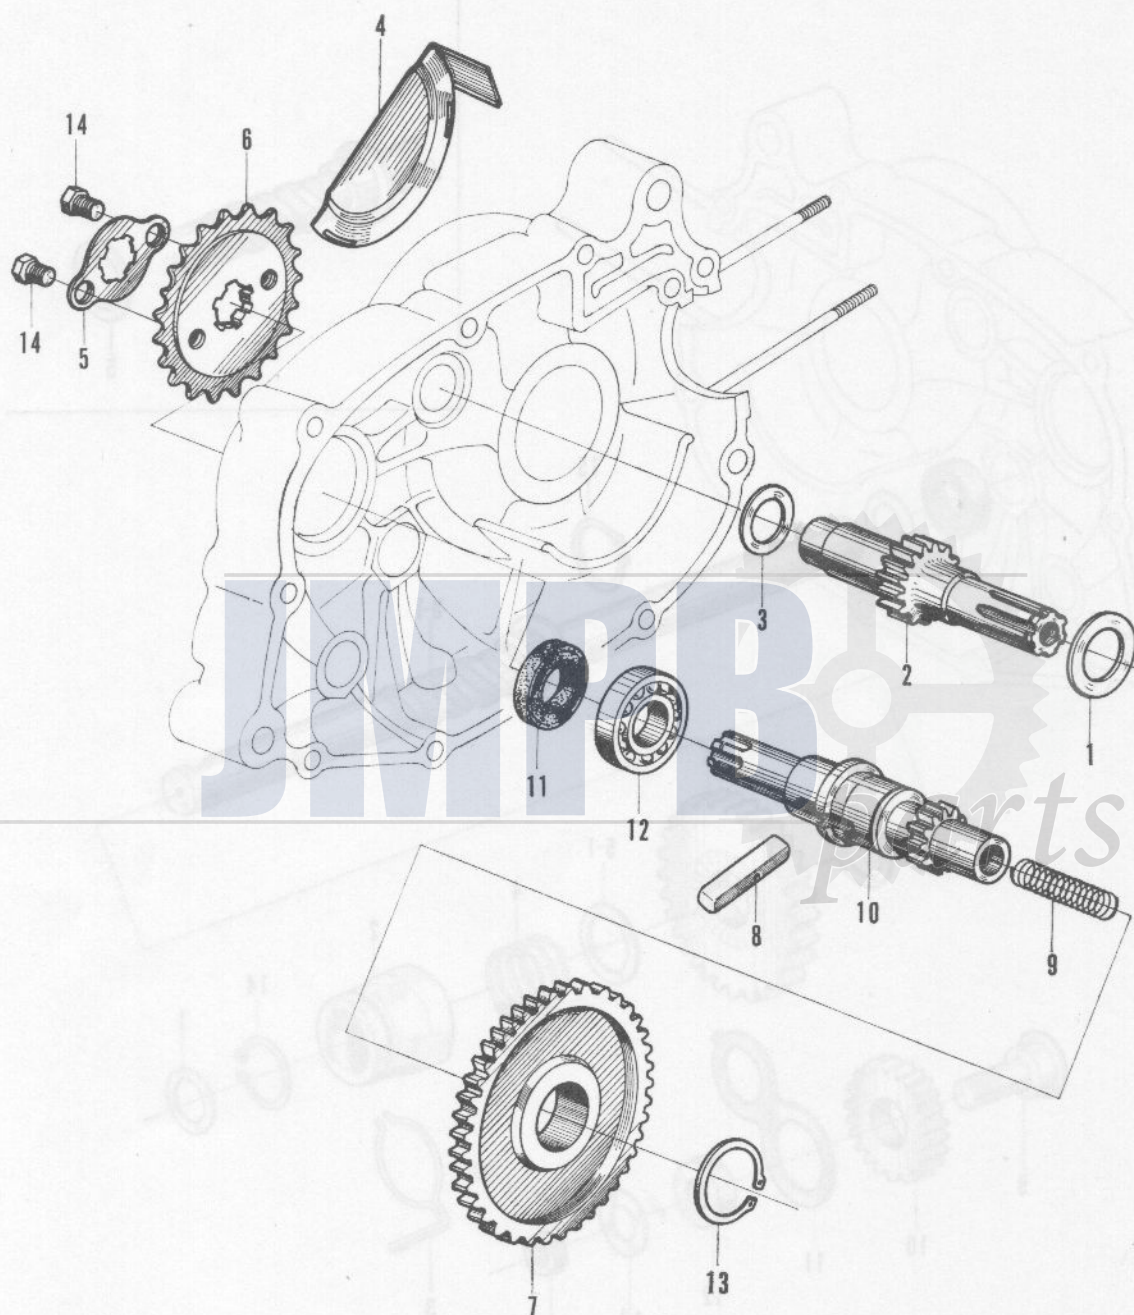

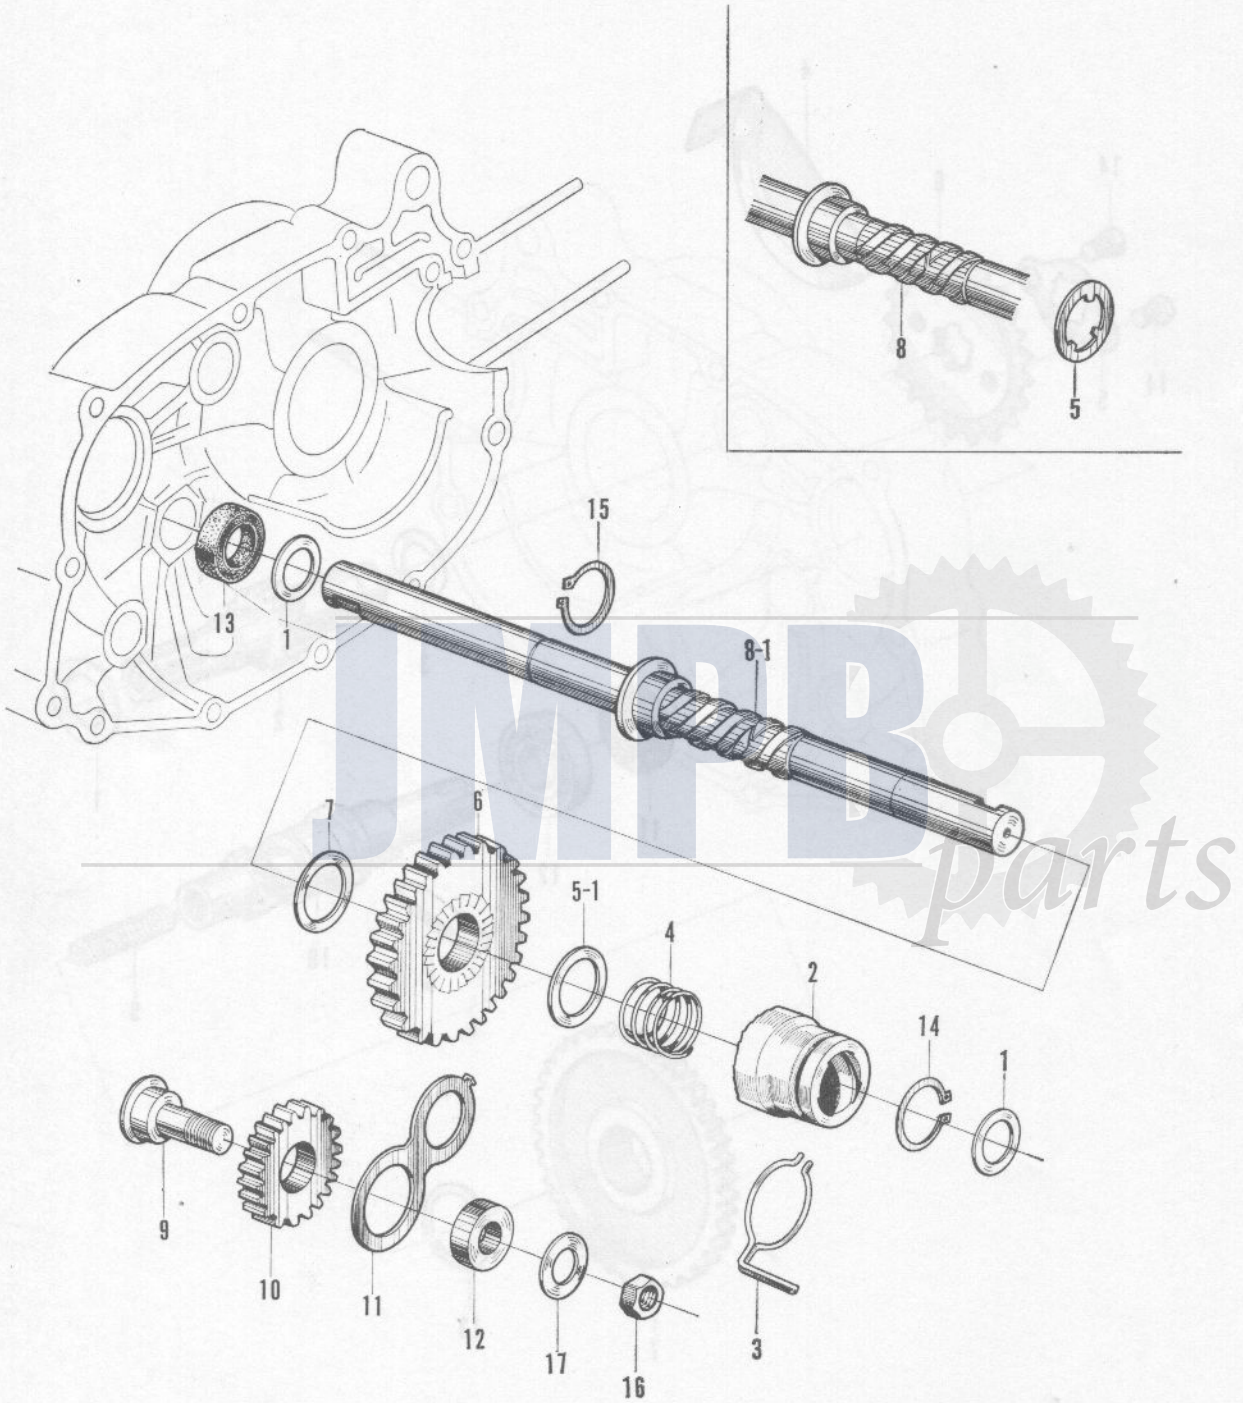



E-9 Pedal Shaft

HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	90453-235-000	WASHER, thrust, 16 mm	2	PC50-1000001		
2	28806-063-010	RATCHET, starter drive	1	PC50-1000001		
3	28239-063-010	SPRING, friction	1	PC50-1000001		
4	28807-063-000	SPRING, set, starter gear	1	PC50-1000001		
5	90463-063-010	WASHER, 20 mm	1	PC50-1000001	PC50-1000419	
● 5-1	90463-063-020	WASHER, 20 mm	1	PC50-1000420		8008
6	28803-063-010	GEAR, starter (38T)	1	PC50-1000001		
7	90553-706-000	WASHER, thrust, 25 mm	1	PC50-1000001		
8	28811-063-050	SHAFT, pedal	1	PC50-1000001	PC50-1000419	
● 8-1	28810-063-020	SHAFT, pedal	1	PC50-1000420		8008
9	28809-063-010	SHAFT, starter idle gear	1	PC50-1000001		
10	28808-063-010	GEAR, starter idle (22T)	1	PC50-1000001		
11	90467-063-000	WASHER, counter	1	PC50-1000001		
12	90503-063-000	COLLAR, idle gear	1	PC50-1000001		
13	91204-063-003	OIL-SEAL, 16•26•6 (Arai)	1	PC50-1000001		
14	94510-22000	CIR-CLIP, external, 22 mm	1			
15	94510-16000	CIR-CLIP, external, 16 mm	1			
16	94001-10000	NUT, hex., 10 mm	1			
17	94101-10000	WASHER, plain, 10 mm	1			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	11100-063-020	CRANKCASE, right	1	PC50-1000001	PC50-1008607	
● 1-1	11100-063-030	CRANKCASE, right	1	PC50-1008608		8007
2	11201-063-020	CRANKCASE, left	1	PC50-1000001		
3	11191-063-010	PACKING, crankcase	1	PC50-1000001		
4	17133-063-010	CLAMPER, breather tube	1	PC50-1000001		
5	90013-044-000	BOLT, drain plug, 8 mm	1	PC50-1000001		
6	90488-044-000	WASHER, 8 mm	1	PC50-1000001		
7	91211-044-000	OIL-SEAL, 15•25•6	1	PC50-1000001		
8	90704-035-000	PIN, knock, 10×14A	2	PC50-1000001		
9	94301-08100	PIN, dowel, 8×10A	2			
10	94301-08140	PIN, dowel, 8×14A	2			
11	93500-06032	SCREW, pan, 6×32	4			
12	93500-06040	SCREW, pan, 6×40	1			
13	93500-06045	SCREW, pan, 6×45	1			
14	93500-06071	SCREW, pan, 6×71	1			
15	92700-06082	BOLT, stud, 6×82	1			
16	92700-06101	BOLT, stud, 6×101	1			
17	92700-06111	BOLT, stud, 6×111	1			
18	92700-06119	BOLT, stud, 6×119	1			
19	95001-80280-10	TUBE, fuel, 8×280	1			

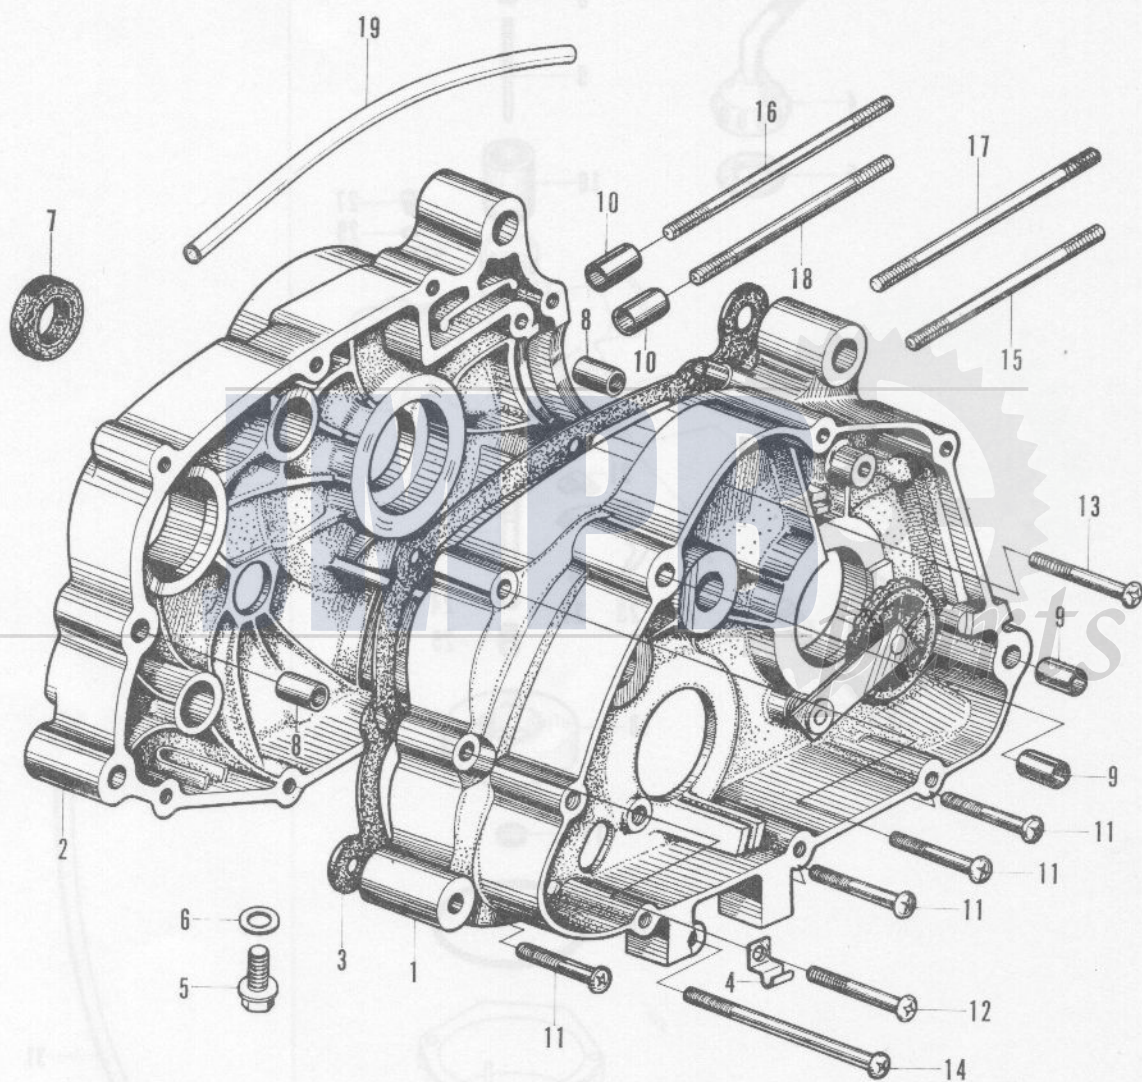

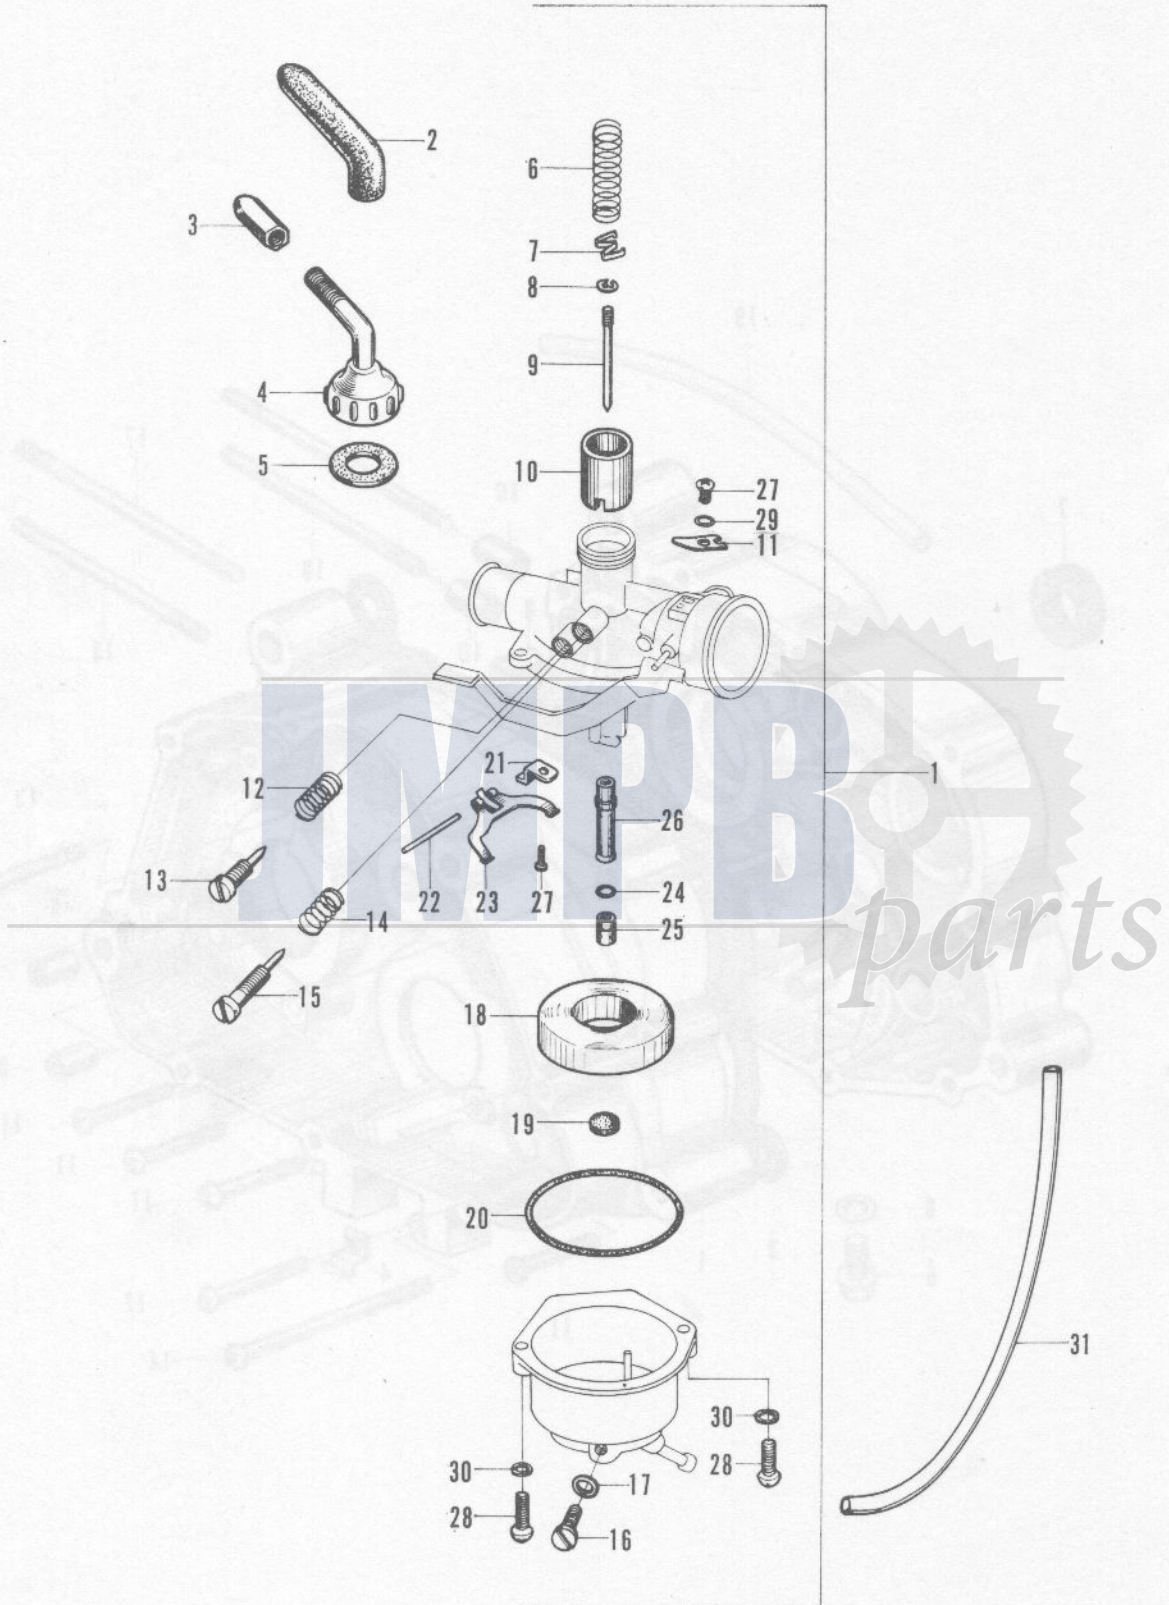



E-11 Carburetor (Keihin)

HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	16100-063-004	CARBURETOR ASSY.	1	PC50-1000001		
2	16194-063-004	CAP, cable	1	PC50-1000001		
3	16118-063-004	ADJUSTER, cable	1	PC50-1000001		
4	16119-063-004	TOP.....	1	PC50-1000001		
5	16171-044-004	WASHER, top	1	PC50-1000001		
6	16185-044-004	SPRING, throttle.....	1	PC50-1000001		
7	16156-044-004	PLATE, needle clip	1	PC50-1000001		
8	16157-044-004	CLIP, needle.....	1	PC50-1000001		
9	16151-063-004	NEEDLE, jet	1	PC50-1000001		
10	16141-063-004	VALVE, throttle	1	PC50-1000001		
11	16199-063-004	PLATE, clip.....	1	PC50-1000001		
12	16181-001-004	SPRING, air screw.....	1	PC50-1000001		
13	16162-044-004	SCREW, air	1	PC50-1000001		
14	16181-250-004	SPRING, throttle stop	1	PC50-1000001		
15	16163-063-004	SCREW, throttle stop	1	PC50-1000001		
16	16164-040-004	SCREW, drain	1	PC50-1000001		
17	16189-056-004	WASHER, fiber, 6.2 ϕ	1	PC50-1000001		
18	16122-063-004	FLOAT	1	PC50-1000001		
19	16197-063-004	PACKING	1	PC50-1000001		
20	16173-063-004	O-RING, 43 ϕ	1	PC50-1000001		
21	16196-063-004	PLATE, arm pin set	1	PC50-1000001		
22	16126-063-004	PIN, arm	1	PC50-1000001		
23	16127-063-004	ARM, float.....	1	PC50-1000001		
24	16178-548-004	O-RING, 3.2 ϕ	1	PC50-1000001		
25	99114-063-0500	JFT, main (#50)	1	PC50-1000001		
	99114-063-0520	JET, main (#52)	1	PC50-1000001		
	99114-063-0550	JET, main (#55) (S.T.D.)	1	PC50-1000001		
	99114-063-0580	JET, main (#58)	1	PC50-1000001		
	99114-063-0600	JET, main (#60)	1	PC50-1000001		
26	16133-063-004	JET, needle	1	PC50-1000001		
27	93500-03005-0A	SCREW, pan, 3 $\times$ 5.....	2			
28	93500-04012-0A	SCREW, pan, 4 $\times$ 12	2			
29	94111-03000	WASHER, spring, 3 mm	1			
30	94111-04000	WASHER, spring, 4 mm	2			
31	95001-35140-10	TUBE, fuel, 3.5 $\times$ 140	1			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	88100-063-000	MIRROR ASSY., back (Used in General, England)	1	PC50-1000001		
2	45450-063-010	CABLE, front brake	1	PC50-1000001		
3	90114-063-000	SCREW, handle lever pivot.....	3	PC50-1000001		
4	53175-063-000XL	LEVER, right handle (Ivory white)	1	PC50-1000001		
5	90101-063-000	SCREW, set, throttle grip	1	PC50-1000001		
6	53165-063-000XL	RUBBER, right grip (Ivory white)	1	PC50-1000001		
7	53141-044-010	PIPE, throttle grip	1	PC50-1000001		
8	53161-044-000	HINGE, throttle cable	1	PC50-1000001		
9	53162-063-000	HOLDER, outer, throttle cable	1	PC50-1000001		
10	53163-044-010	STOPPER, throttle grip	1	PC50-1000001		
11	17910-063-020	CABLE, throttle	1	PC50-1000001		
12	17911-044-000	GROMMET, throttle	1	PC50-1000001		
13	35300-063-010	BUTTON, horn	1	PC50-1000001		
14	14950-063-020	CABLE, decomp.....	1	PC50-1000001		
15	43450-063-040	CABLE, rear brake (Used in General, France)	1	PC50-1000001		
	43450-063-692	CABLE, rear brake (Used in England)	1	PC50-1000001		
16	53178-063-000XL	LEVER, left handle (Ivory white).....	1	PC50-1000001		
17	53181-063-000XL	LEVER, decomp (Ivory white)	1	PC50-1000001		
18	53166-063-000XL	RUBBER, left grip (Ivory white)	1	PC50-1000001		
19	90525-030-000	WASHER B, handle holder setting	2	PC50-1000001		
20	81213-063-000	CLIP, wire	1	PC50-1000001		
21	38100-044-680	HORN ASSY.	1	PC50-1000001		
22	90151-063-000	BOLT, handle set	1	PC50-1000001		
23	90544-044-000	WASHER, handle set	1	PC50-1000001		
24	53104-044-000	BRACKET, handle.....	1	PC50-1000001		
25	53109-044-000	NUT, handle set.....	1	PC50-1000001		

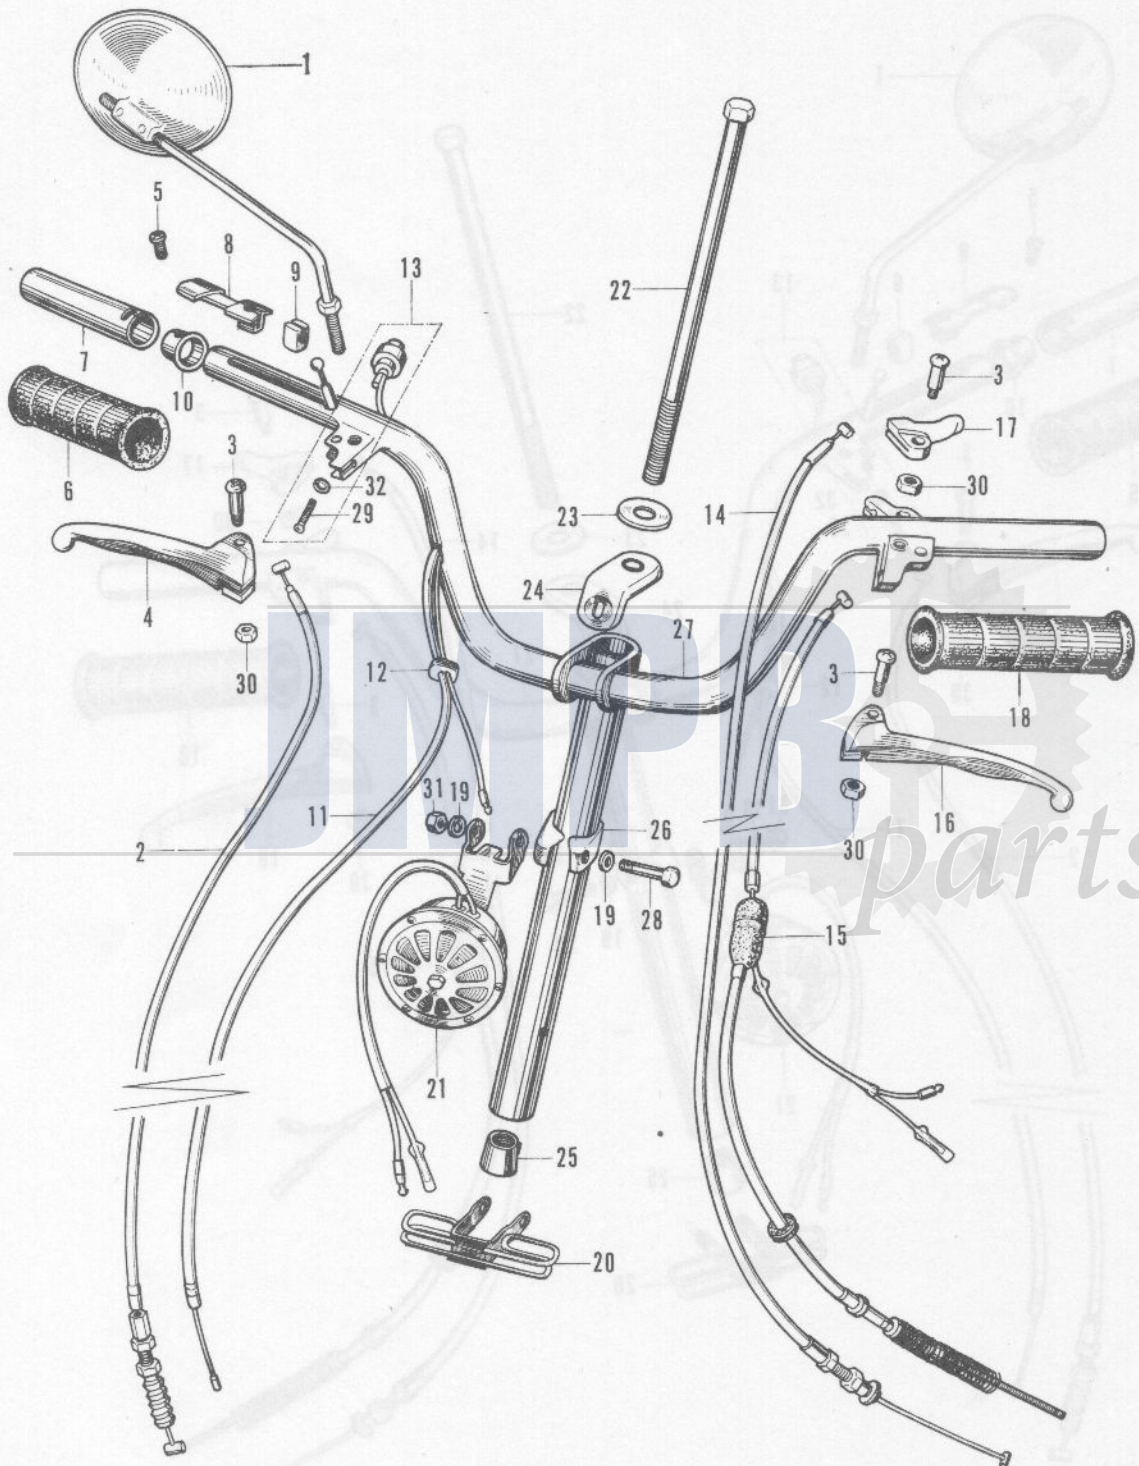

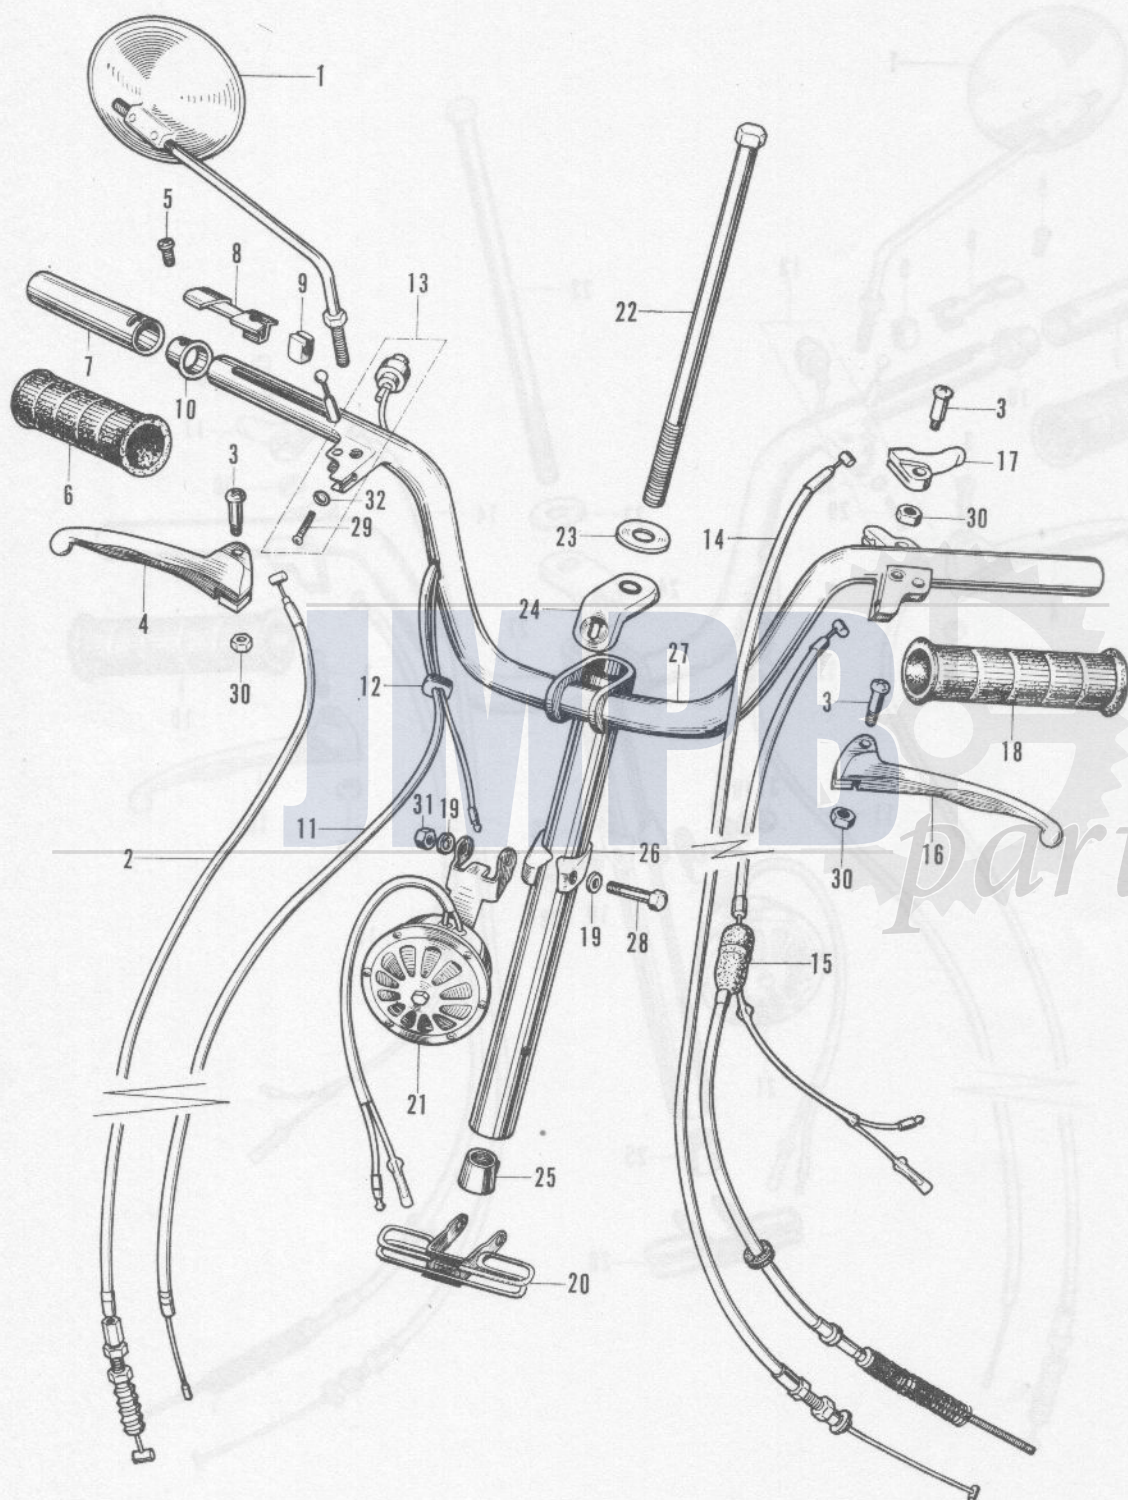


F-1 Steering Handle


HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
26	81211-044-000	BRACKET, front carrier	1	PC50-1000001		
27	53100-063-010	HANDLE, steering.....	1	PC50-1000001		
28	92000-06040	BOLT, hex., 6×40	1			
29	93600-03008-0A	SCREW, flat, 3×8	1			
30	94001-05000-0S	NUT, hex., 5 mm	3			
31	94001-06000	NUT, hex., 6 mm	1			
32	94111-03000	WASHER, spring, 3 mm	1			

JMPB parts

Ref. No.	Part No.	Description	Regd. No. PC50	No. Used on		News No.
				From	To	
1	90301-044-000	NUT, steering head stem	1	PC50-1000001		
2	53211-044-010	RACE, top, steering cone	1	PC50-1000001		
3	50301-044-020	RACE, top, steering ball	1	PC50-1000001		
4	50302-044-000	RACE, bottom, steering ball	1	PC50-1000001		
5	53212-044-000	RACE, bottom, steering cone	1	PC50-1000001		
6	90556-044-000	WASHER, fender setting	2	PC50-1000001		
7	61102-063-000	COVER, front fender stay	1	PC50-1000001		
8	61117-001-010	METAL, upper, front fender fixing	2	PC50-1000001		
9	61100-044-030XL	FENDER, front (Ivory white)..... (Used in General, France)	1	PC50-1000001		
	61100-063-600XL	FENDER, front (Ivory white)..... (Used in England)	1	PC50-1000001		
10	53600-044-000	LOCK, steering handle	1	PC50-1000001		
11	51404-044-030	RUBBER, front cushion rebound stopper	2	PC50-1000001		
12	51100-044-070D	FORK, front (Columbia blue).....	1	PC50-1000001		
	51100-044-070AW	FORK, front (Bright red).....	1	PC50-1000001		
	51100-044-070Z	FORK, front (Non sanding).....	1	PC50-1000001		
13	61131-063-600B	PLATE, front number (Black)	1	PC50-1000001		
		(Used in England)				
14	90556-044-000	WASHER, fender setting	6	PC50-1000001		
		(Used in England)				
15	93000-08045-0A	BOLT, hex., 8×45	2			
16	93500-05012-0A	SCREW, pan, 5×12	4			
		(Used in England)				
17	93500-06016	SCREW, pan, 6×16	2			
18	93600-06012	SCREW, flat, 6×12	2			
19	94001-05000-0S	NUT, hex., 5 mm (Used in England).....	4			
20	94001-08000-0S	NUT, hex., 8 mm	2			
21	94101-06000	WASHER, plain, 6 mm.....	2			
22	94111-08000	WASHER, spring, 8 mm	2			
23	96211-06000	BALL, steel, #6	52			

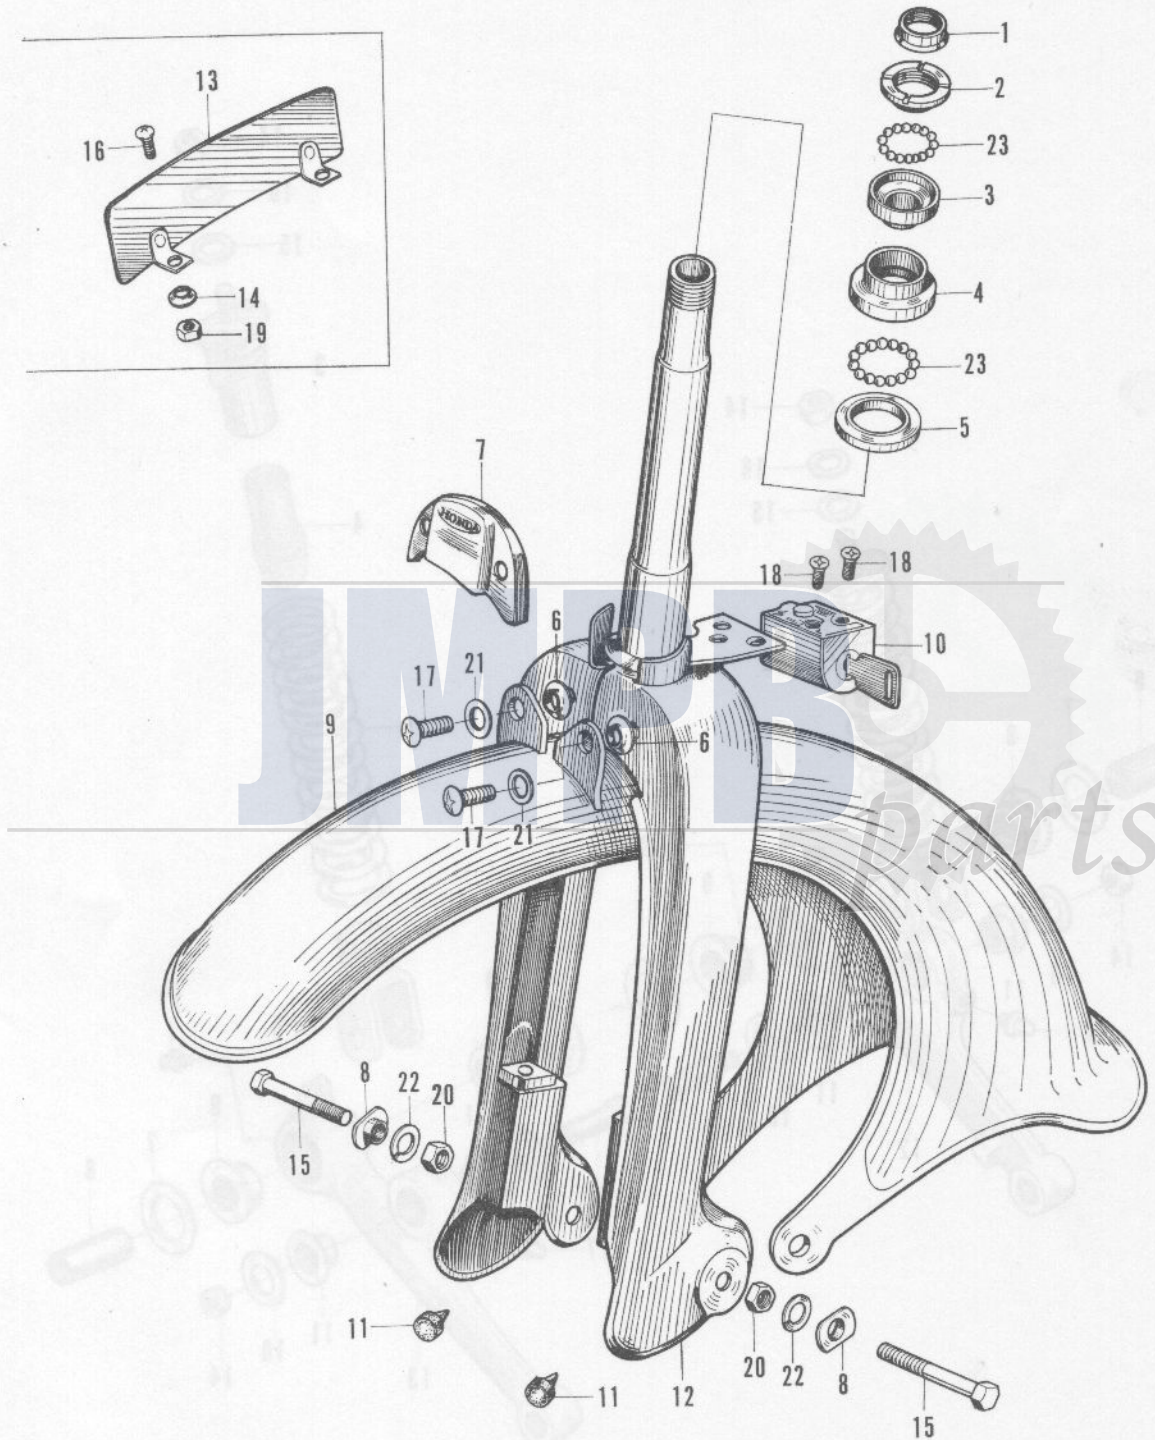

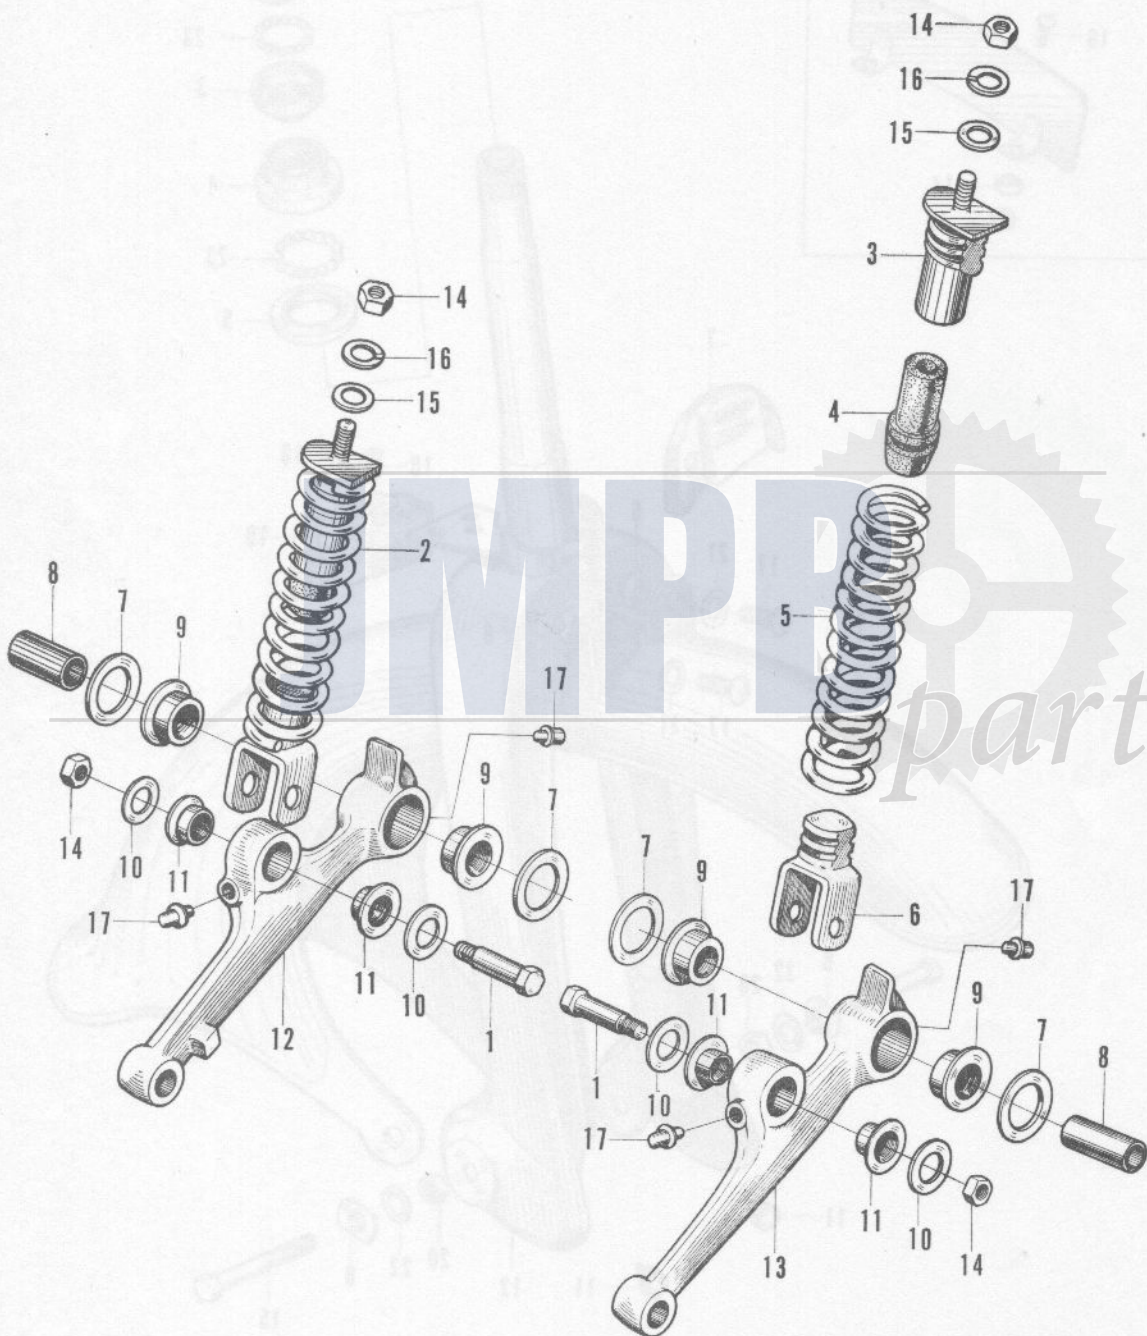



F-3 Front Cushion

HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	90149-044-000	BOLT, under, front cushion	2	PC50-1000001		
2	51400-063-000	CUSHION ASSY., front	2	PC50-1000001		
3	51401-044-050	METAL, upper, front cushion	2	PC50-1000001		
4	51405-044-690	RUBBER, front cushion stopper	2	PC50-1000001		
5	51403-063-000	SPRING, front cushion.....	2	PC50-1000001		
6	51402-044-030	METAL, lower, front cushion	2	PC50-1000001		
7	51223-044-000	SEAL, front arm pivot bush	4	PC50-1000001		
8	51231-044-000	COLLAR, front arm pivot	2	PC50-1000001		
9	51221-044-000	BUSH, front arm pivot.....	4	PC50-1000001		
10	51213-044-000	SEAL, front cushion under bush	4	PC50-1000001		
11	51211-044-000	BUSH, under, front cushion	4	PC50-1000001		
12	51210-063-000	ARM, right, front suspension.....	1	PC50-1000001		
13	51220-063-000	ARM, left, front suspension.....	1	PC50-1000001		
14	94001-06000	NUT, hex., 6 mm	4			
15	94101-06000	WASHER, plain, 6 mm.....	2			
16	94111-06000	WASHER, spring, 6 mm	2			
17	96201-30000	NIPPLE, grease, 4.5 ϕ	4			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	44301-063-000	AXLE, front wheel.....	1	PC50-1000001		
2	45133-044-000	SPRING, brake shoe	1	PC50-1000001		
3	45120-063-003	SHOE, brake (Fuji)	2	PC50-1000001		
4	45410-063-000	ARM, front brake	1	PC50-1000001		
5	45131-063-000	CAM, front brake	1	PC50-1000001		
6	44806-044-690	GEAR, speedometer	1	PC50-1000001		
7	44809-044-000	WASHER, gear box	2	PC50-1000001		
8	90751-044-000	OIL-SEAL, 39457	1	PC50-1000001		
9	90753-044-000	OIL-SEAL, 451135	1	PC50-1000001		
10	90539-044-000	WASHER, speedometer pinion	1	PC50-1000001		
11	44805-044-690	PINION, speedometer	1	PC50-1000001		
12	45100-063-010	PANEL, front brake	1	PC50-1000001		
13	44311-044-020	COLLAR, side, front wheel.....	1	PC50-1000001		
14	90752-044-000	OIL-SEAL, 17326	1	PC50-1000001		
15	96100-62010	BEARING, ball, 6201.....	2	PC50-1000001		
16	44620-044-000	COLLAR, front axle distance	1	PC50-1000001		
17	44711-063-003	TIRE, front wheel (Bridgestone)	1	PC50-1000001		
	44711-063-006	TIRE, front wheel (Nitto).....	1	PC50-1000001		
18	44712-063-000	TUBE, wheel	1	PC50-1000001		
19	44713-063-000	FRAP, tire	1	PC50-1000001		
20	44701-044-690	RIM, front wheel	1	PC50-1000001		
21	44601-063-000	HUB, front wheel	1	PC50-1000001		
22	97142-112451	SPORK A, # 13×202-5.....	16			
23	97241-112441	SPORK A, # 13×202	16			
24	92000-05022-0A	BOLT, hex., 5×22	1			
25	94001-05000-0S	NUT, hex., 5 mm	1			
26	94001-10000-0S	NUT, hex., 10 mm	1			
27	94101-05000	WASHER, plain, 5 mm	1			

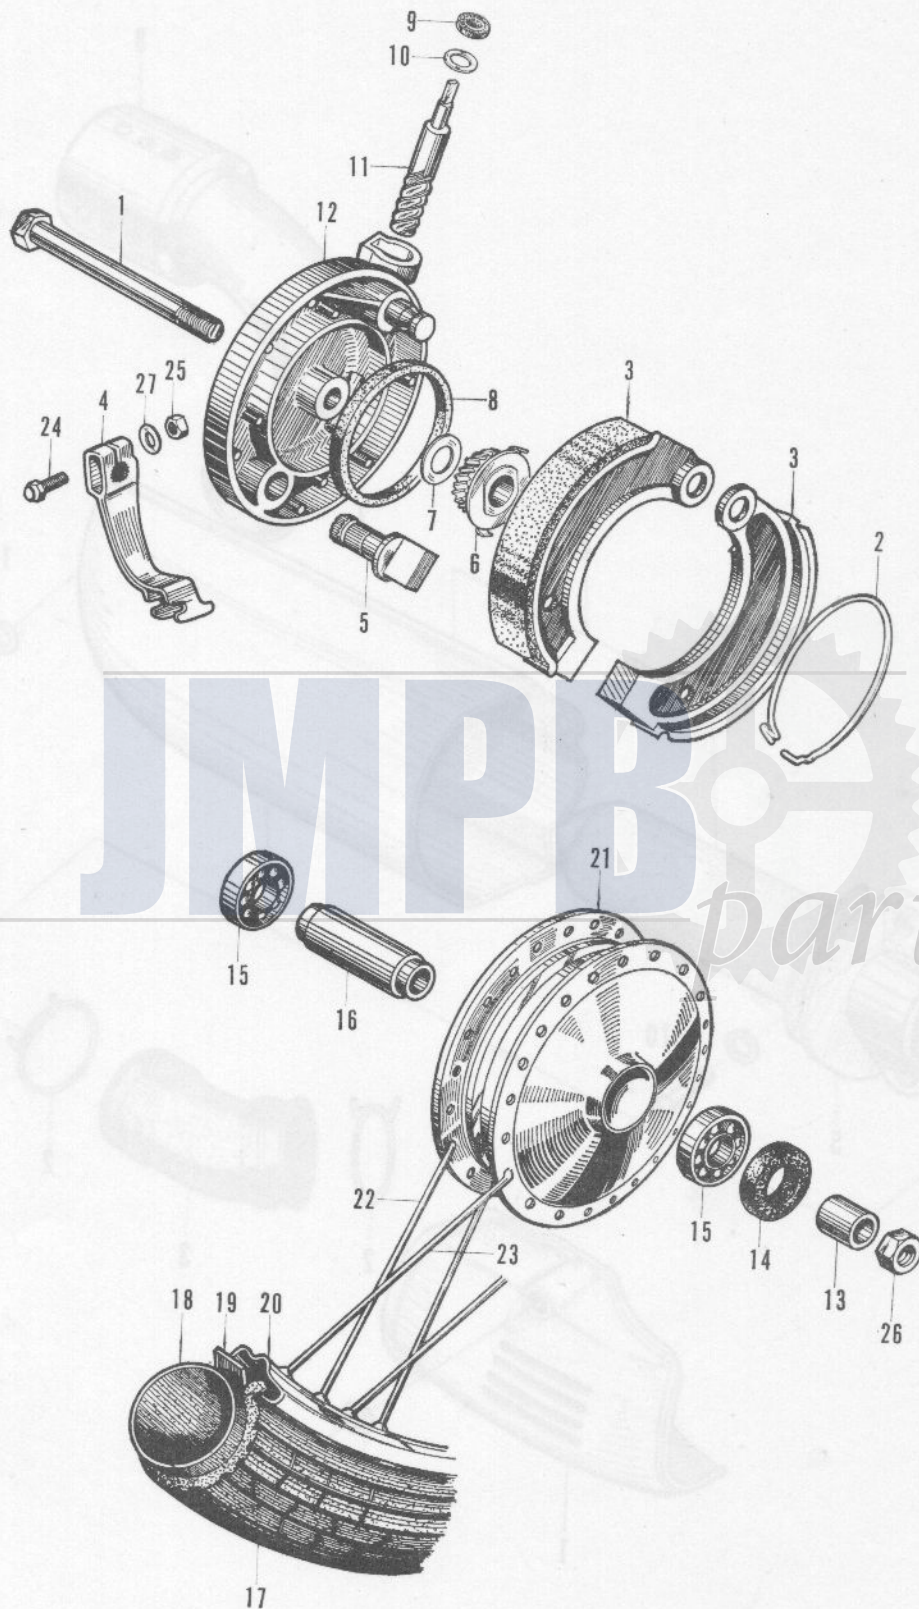

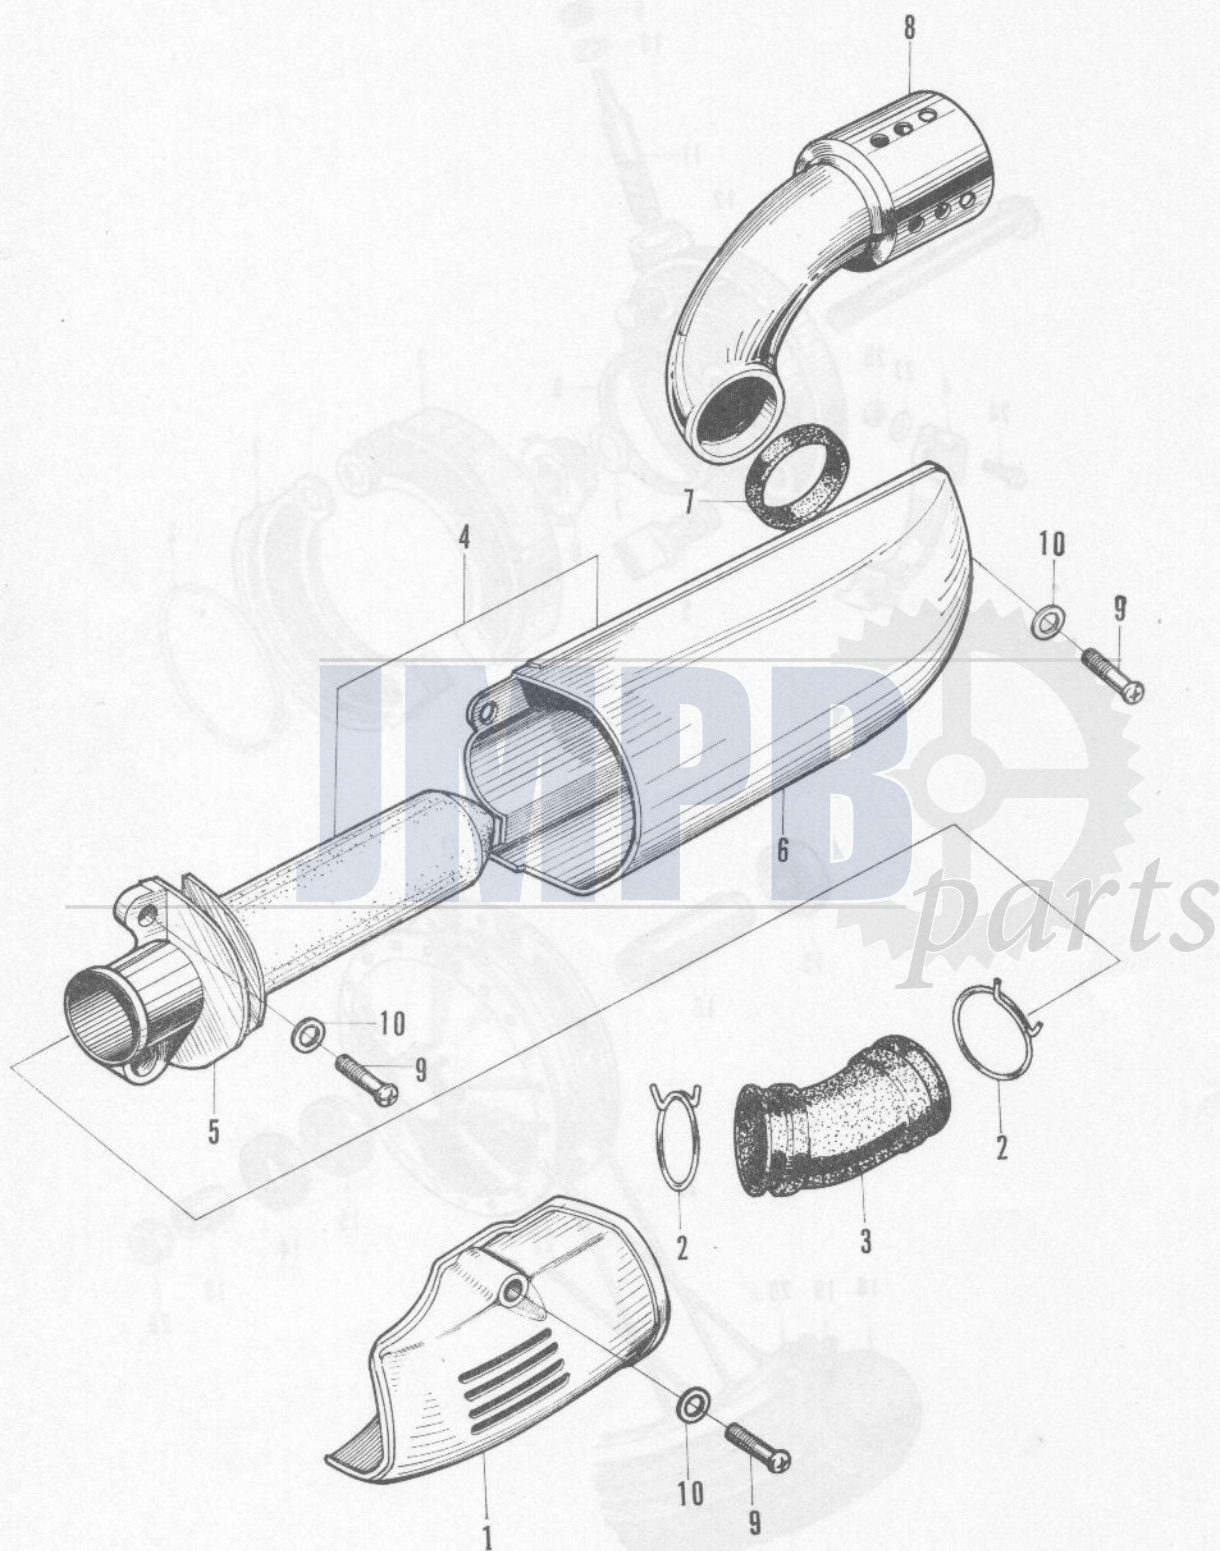



F-5 Air Cleaner**HONDA**


Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	17260-063-020D	COVER, carburetor (Columbia blue).....	1	PC50-1000001		
	17260-063-020AW	COVER, carburetor (Bright red)	1	PC50-1000001		
2	17255-063-000	CLIP, connecting tube, air cleaner	2	PC50-1000001		
3	17253-063-010	TUBE, connecting, air cleaner	1	PC50-1000001		
4	17200-063-030D	CLEANER ASSY., air (Columbia blue).	1	PC50-1000001		
	17200-063-030AW	CLEANER ASSY., air (Bright red)	1	PC50-1000001		
● 5	17205-063-020	ELEMENT, air cleaner.....	1	PC50-1000001		8005
6	17225-063-020D	CASE, air cleaner (Columbia blue)	1	PC50-1000001		
	17225-063-020AW	CASE, air cleaner (Bright red)	1	PC50-1000001		
7	17227-063-010	PACKING, inlet tube	1	PC50-1000001		
8	17251-063-010	TUBE, air cleaner inlet	1	PC50-1000001		
9	93500-06020	SCREW, pan, 6×20	3			
10	94101-06000	WASHER, plain, 6 mm	3			

JMPB
parts

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	81200-063-020D	CARRIER, luggage (Columbia blue).....	1	PC50-1000001		
	81200-063-020AW	CARRIER, luggage (Bright red).....	1	PC50-1000001		
	81200-063-020Z	CARRIER, luggage (Non sanding)	1	PC50-1000001		
2	77100-063-010A	SEAT, single (Black).....	1	PC50-1000001		
3	77211-063-000	RUBBER, seat stopper	2	PC50-1000001		
4	77312-063-000	BLOCK, seat setting	1	PC50-1000001		
5	77300-063-010B	BRACKET, seat (Black)	1	PC50-1000001		
6	77500-063-020B	PLATE, seat setting (Black)	1	PC50-1000001		
7	92000-06012	BOLT, hex., 6×12	6			
8	94001-06000	NUT, hex., 6 mm	3			
9	94101-06000	WASHER, plain, 6 mm	6			
10	94111-06000	WASHER, spring, 6 mm	3			
11	89101-063-000	BAG, tool	1	PC50-1000001		
12	83517-063-000	WRENCH, spark plug	1	PC50-1000001		
13	83513-044-000	DRIVER	1	PC50-1000001		

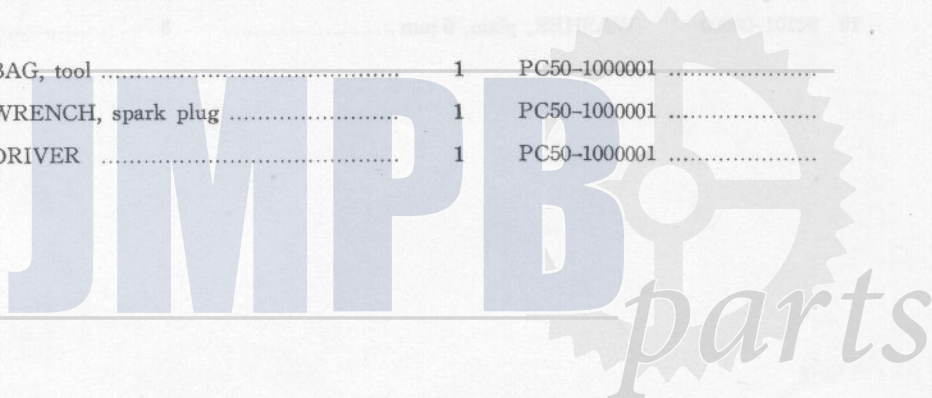

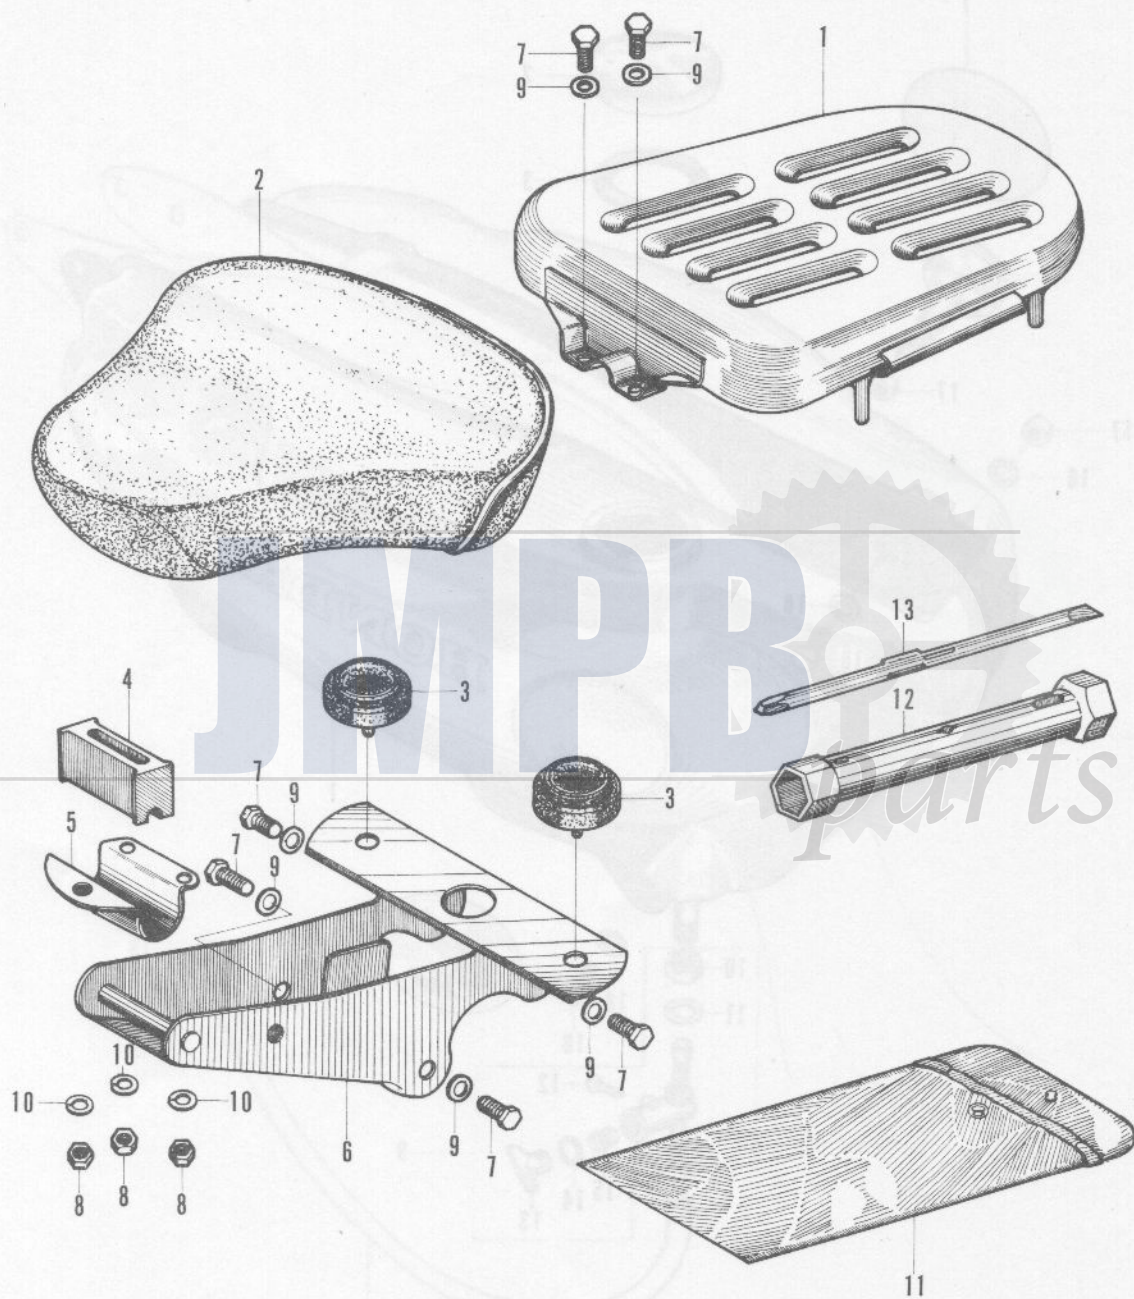

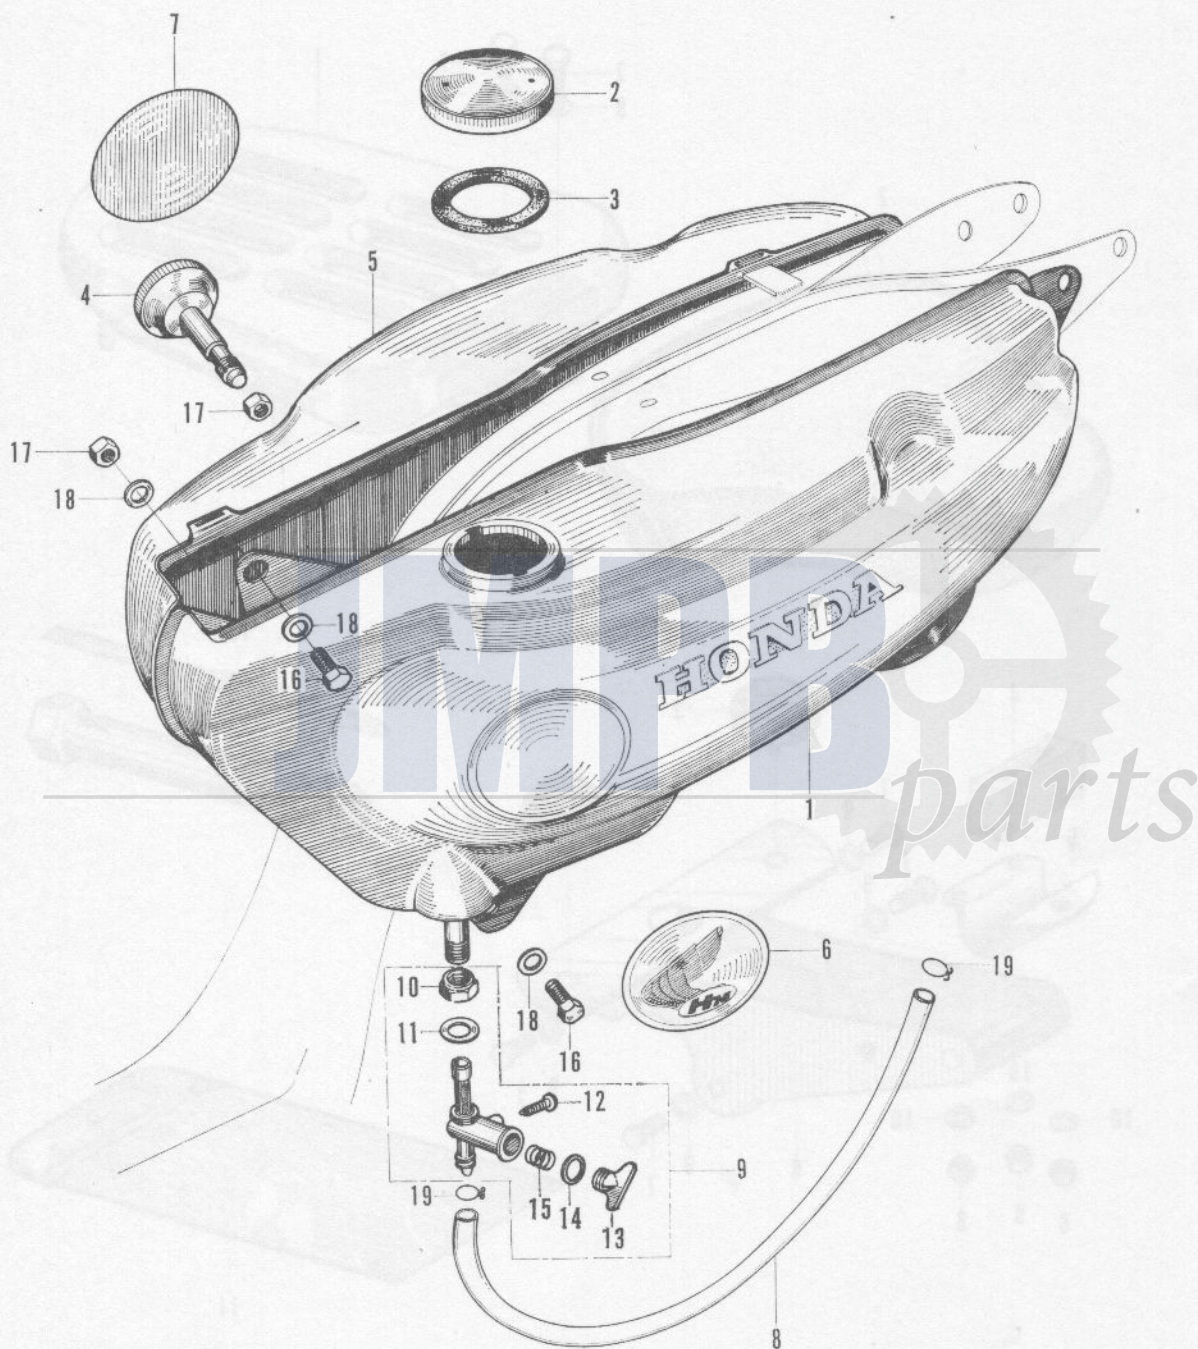



F-7 Fuel Tank · Right Cover

HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	17500-063-030D	TANK, fuel (Columbia blue)	1	PC50-1000001		
	17500-063-030AW	TANK, fuel (Bright red)	1	PC50-1000001		
	17500-063-030Z	TANK, fuel (Non sanding)	1	PC50-1000001		
2	17620-041-000	CAP, fuel filler	1	PC50-1000001		
3	17631-001-000	PACKING, fuel filler cap.....	1	PC50-1000001		
4	83650-063-000	RATCHET, right cover	1	PC50-1000001		
5	83600-063-010D	COVER, right side (Columbia blue).....	1	PC50-1000001		
	83600-063-010AW	COVER, right side (Bright red).....	1	PC50-1000001		
6	87122-063-010	EMBLEM, left fuel tank	1	PC50-1000001		
7	87121-063-010	EMBLEM, right fuel tank	1	PC50-1000001		
8	95001-45465-00	TUBE, fuel, 4.5×465	1	PC50-1000001		
9	16950-044-004	COCK ASSY., fuel (Teikei)	1	PC50-1000001		
10	16962-044-004	NUT, turn buckle (Teikei)	1	PC50-1000001		
11	16958-044-004	PACKING, turn buckle nut (Teikei) ...	1	PC50-1000001		
12	16963-044-004	SCREW, lever stopper (Teikei)	1	PC50-1000001		
13	16953-044-004	LEVER, cock (Teikei)	1	PC50-1000001		
14	16997-044-004	O-RING (Teikei).....	1	PC50-1000001		
15	16960-044-004	SPRING, valve (Teikei)	1	PC50-1000001		
16	92000-06012	BOLT, hex., 6×12	2			
17	94001-06000	NUT, hex., 6 mm	2			
18	94101-06000	WASHER, plain, 6 mm.....	3			
19	95002-45000	CLIP, fuel tube	2			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	90121-063-000	BOLT, pivot, rear fork	1	PC50-1000001		
2	90543-063-010	WASHER, chain case setting	1	PC50-1000001		
3	40510-063-000XL	CASE, drive chain (Ivory white)	1	PC50-1000001		
4	40512-063-000	NUT, chain case setting	1	PC50-1000001		
5	40530-063-003	CHAIN, drive (98 links) (Daido)	1	PC50-1000001		
6	40531-063-003	JOINT, drive chain (Daido).....	1	PC50-1000001		
7	40543-063-000	ADJUSTER, drive chain	2	PC50-1000001		
8	52486-063-000	COLLAR, rubber bush, rear cushion ...	2	PC50-1000001		
9	52476-063-000	BUSH, rubber, rear cushion	2	PC50-1000001		
10	52161-001-010XL	CAP, cross member side (Ivory white) .	1	PC50-1000001		
11	52108-023-000	BUSH, rubber, rear fork pivot	2	PC50-1000001		
12	52100-063-000D	FORK, rear (Columbia blue)	1	PC50-1000001		
	52100-063-000AW	FORK, rear (Bright red)	1	PC50-1000001		
	52100-063-000Z	FORK, rear (Non sanding)	1	PC50-1000001		
13	92000-06016	BOLT, hex., 6×16	1			
14	94001-06000	NUT, hex., 6 mm	2			
15	94021-10000-0S	NUT, blind, 10 mm.....	1			
16	94101-06000	WASHER, plain, 6 mm.....	2			
17	94101-10000	WASHER, plain, 10 mm	1			
18	94111-06000	WASHER, spring, 6 mm	2			

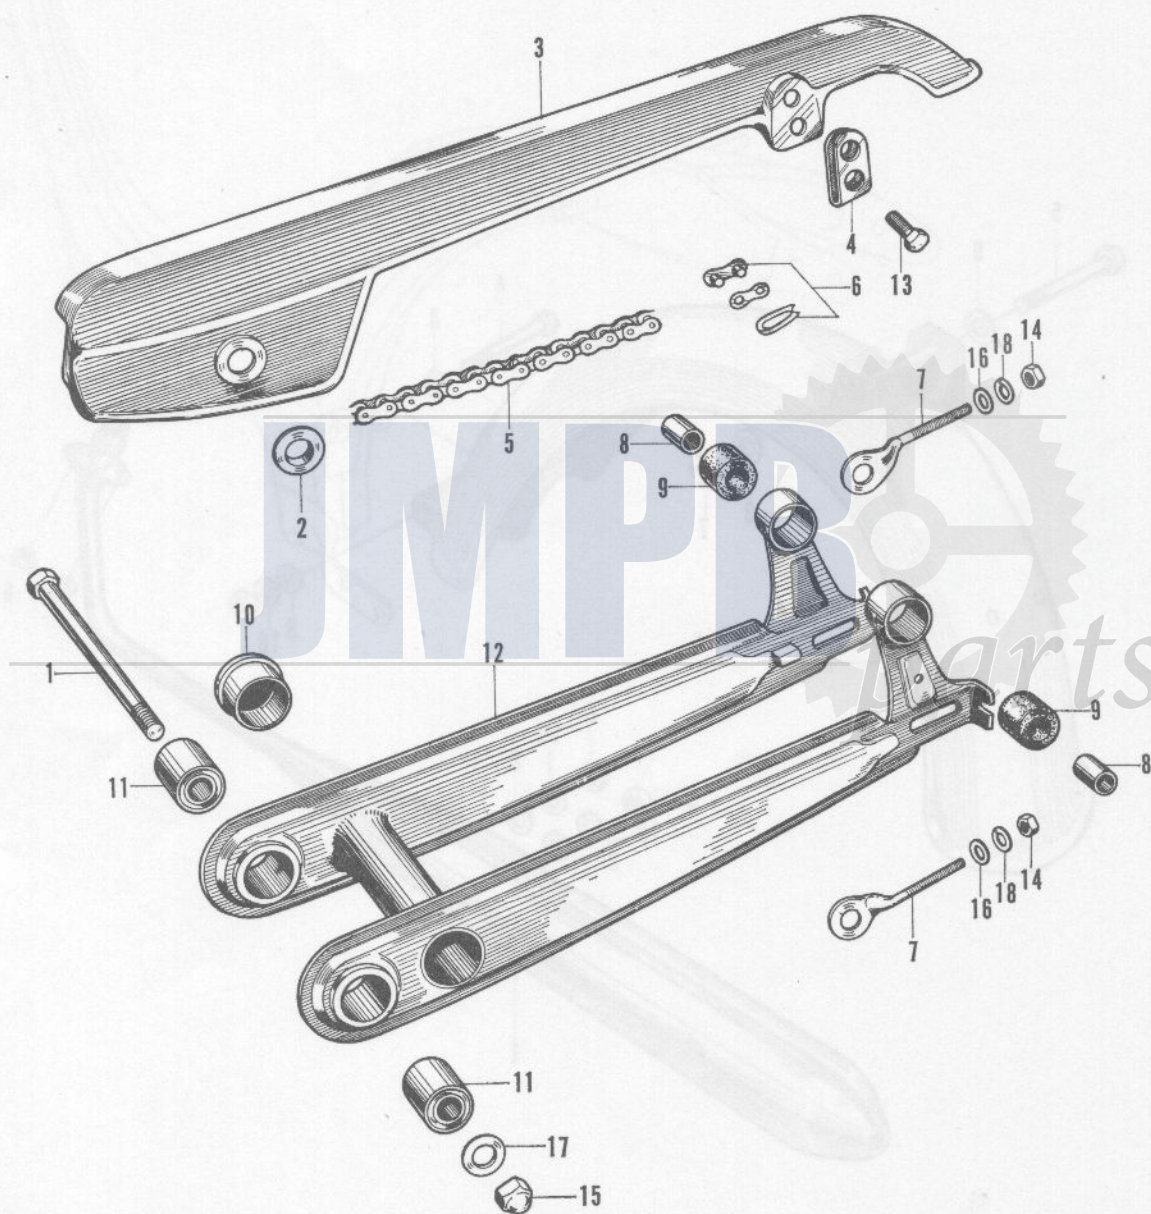

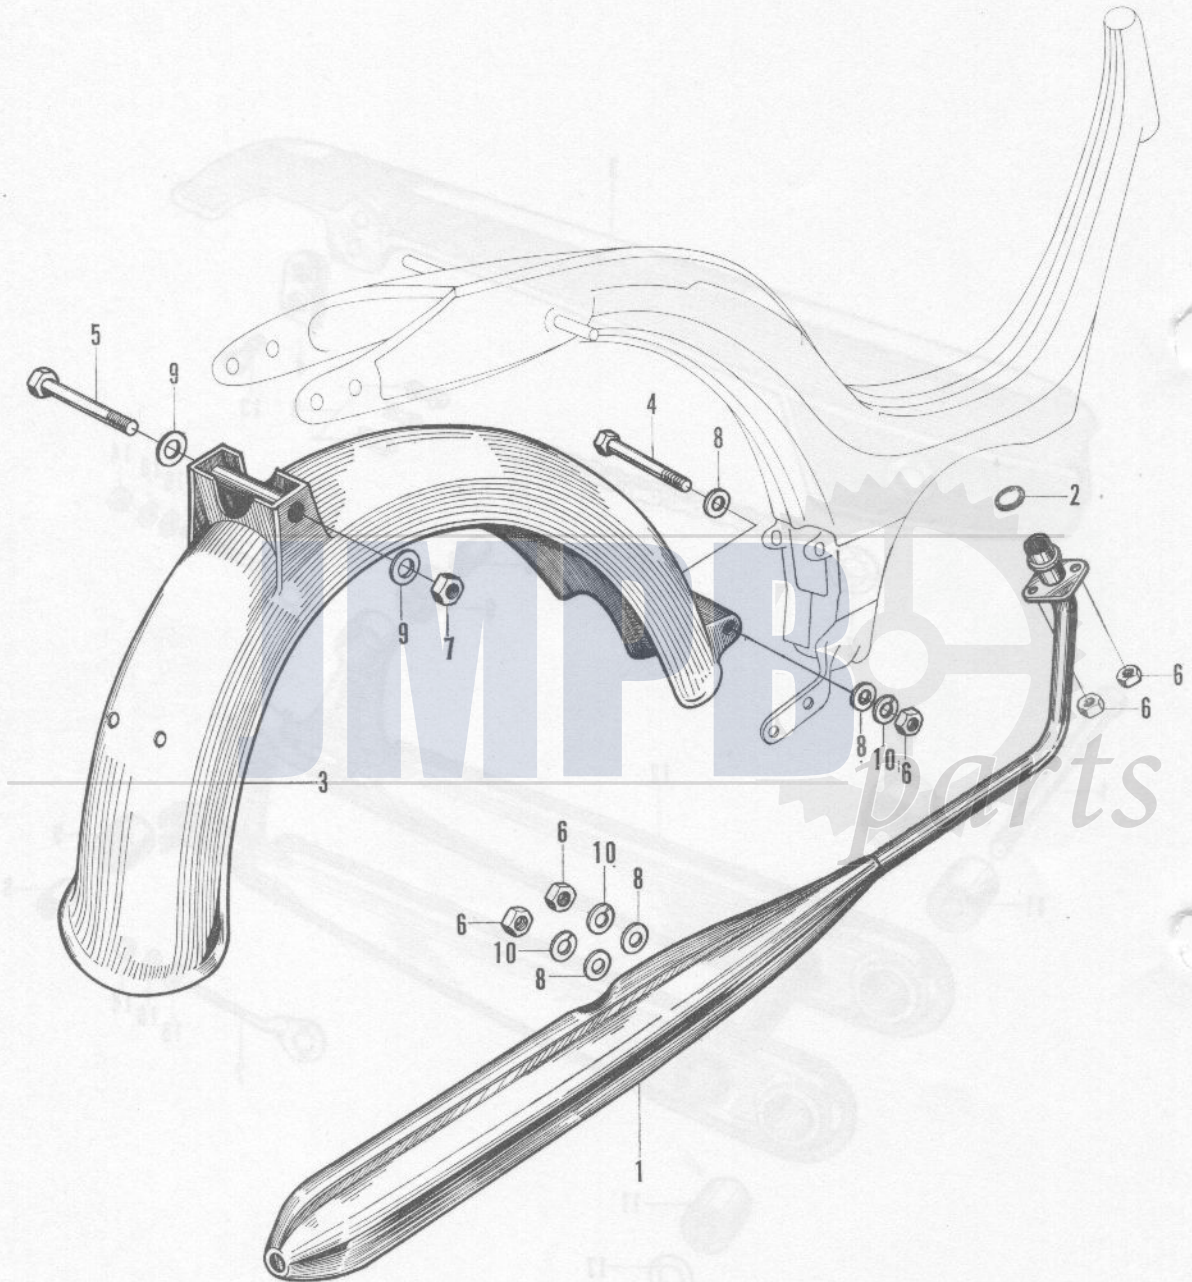

F-9 Rear Fender · Muffler

HONDA


Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	18300-063-000	MUFFLER, exhaust (Used in General, England)	1	PC50-1000001		
	18300-063-620	MUFFLER, exhaust (Used in France)...	1	PC50-1000001		
2	18291-044-020	GASKET, exhaust pipe.....	1	PC50-1000001		
3	80100-063-000XL	FENDER, rear (Ivory white) (Used in General, England)	1	PC50-1000001		
	80100-063-620XL	FENDER, rear (Ivory white) (Usee in France)	1	PC50-1000001		
4	92000-06063	BOLT, hex., 6×63	1			
5	92000-08102-0A	BOLT, hex., 8×102	1			
6	94001-06000	NUT, hex., 6 mm	5			
7	94001-08000-0S	NUT, hex., 8 mm	1			
8	94101-06000	WASHER, plain, 6 mm.....	4			
9	94101-08000	WASHER, plain, 8 mm.....	2			
10	94111-06000	WASHER, spring, 6 mm	3			


JMPB parts

HONDA**F-10 Pedal · Stand**

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	40220-063-010	ARM, crank	2	PC50-1000001		
2	90545-044-000	WASHER, crank arm	2	PC50-1000001		
3	40235-044-000	PIN, crank arm set	2	PC50-1000001		
4	40225-063-005	PEDAL, crank (Sangashima)	2	PC50-1000001		
5	50522-044-010	SPRING, main stand	1	PC50-1000001		
6	90111-063-000	SHAFT, main stand	1	PC50-1000001		
7	50500-063-010B	STAND, main (Black)	1	PC50-1000001		
8	94001-06000	NUT, hex., 6 mm	2			
9	94101-10000	WASHER, plain, 10 mm	1			
10	94201-20180	PIN, cotter, 2 mm	1			

JMPB parts

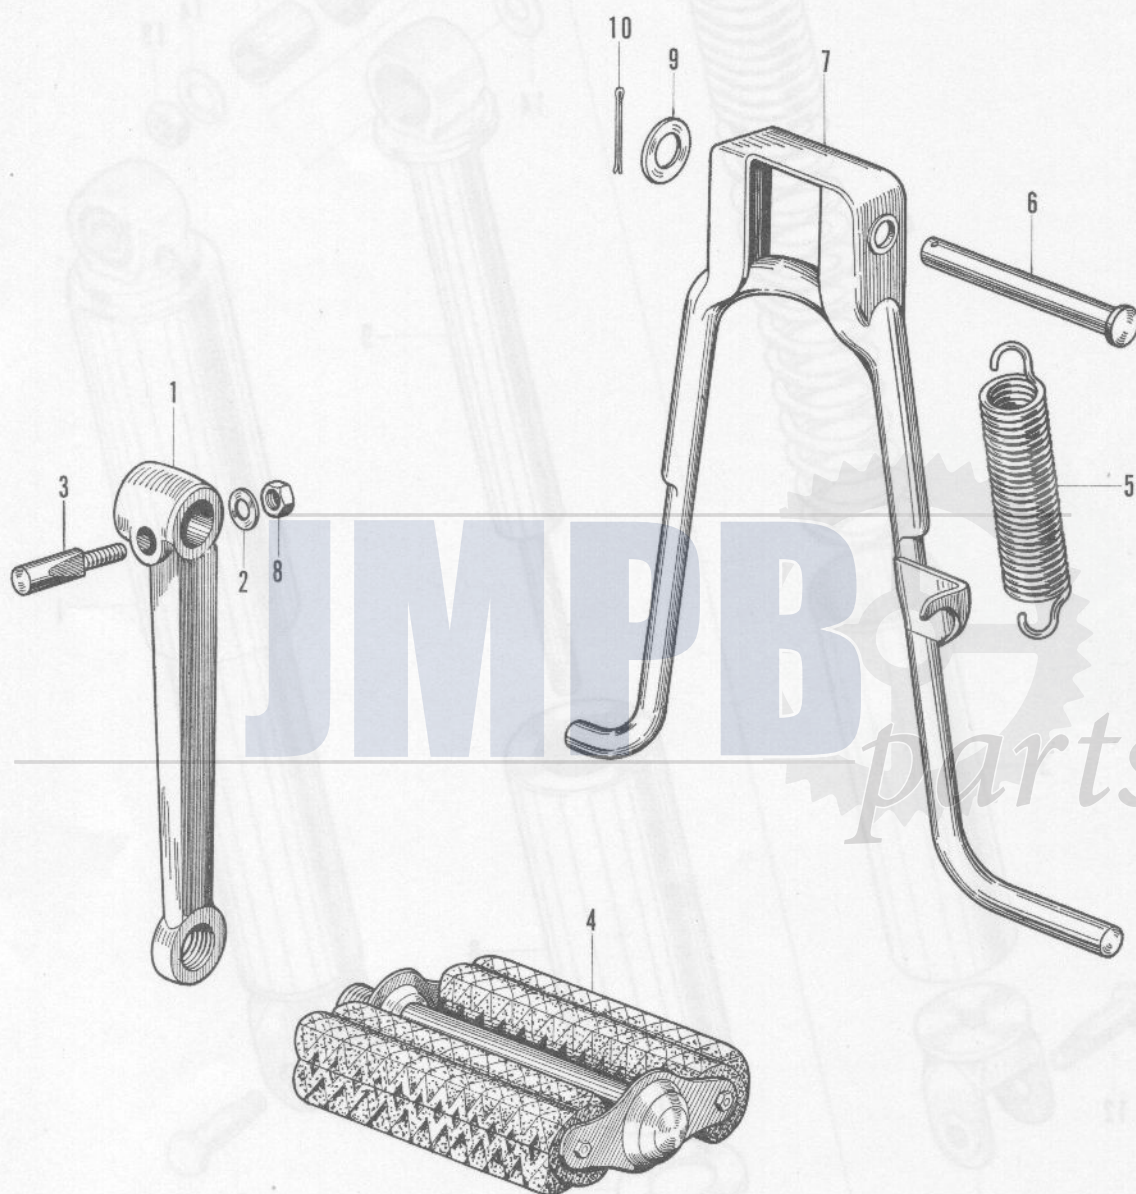

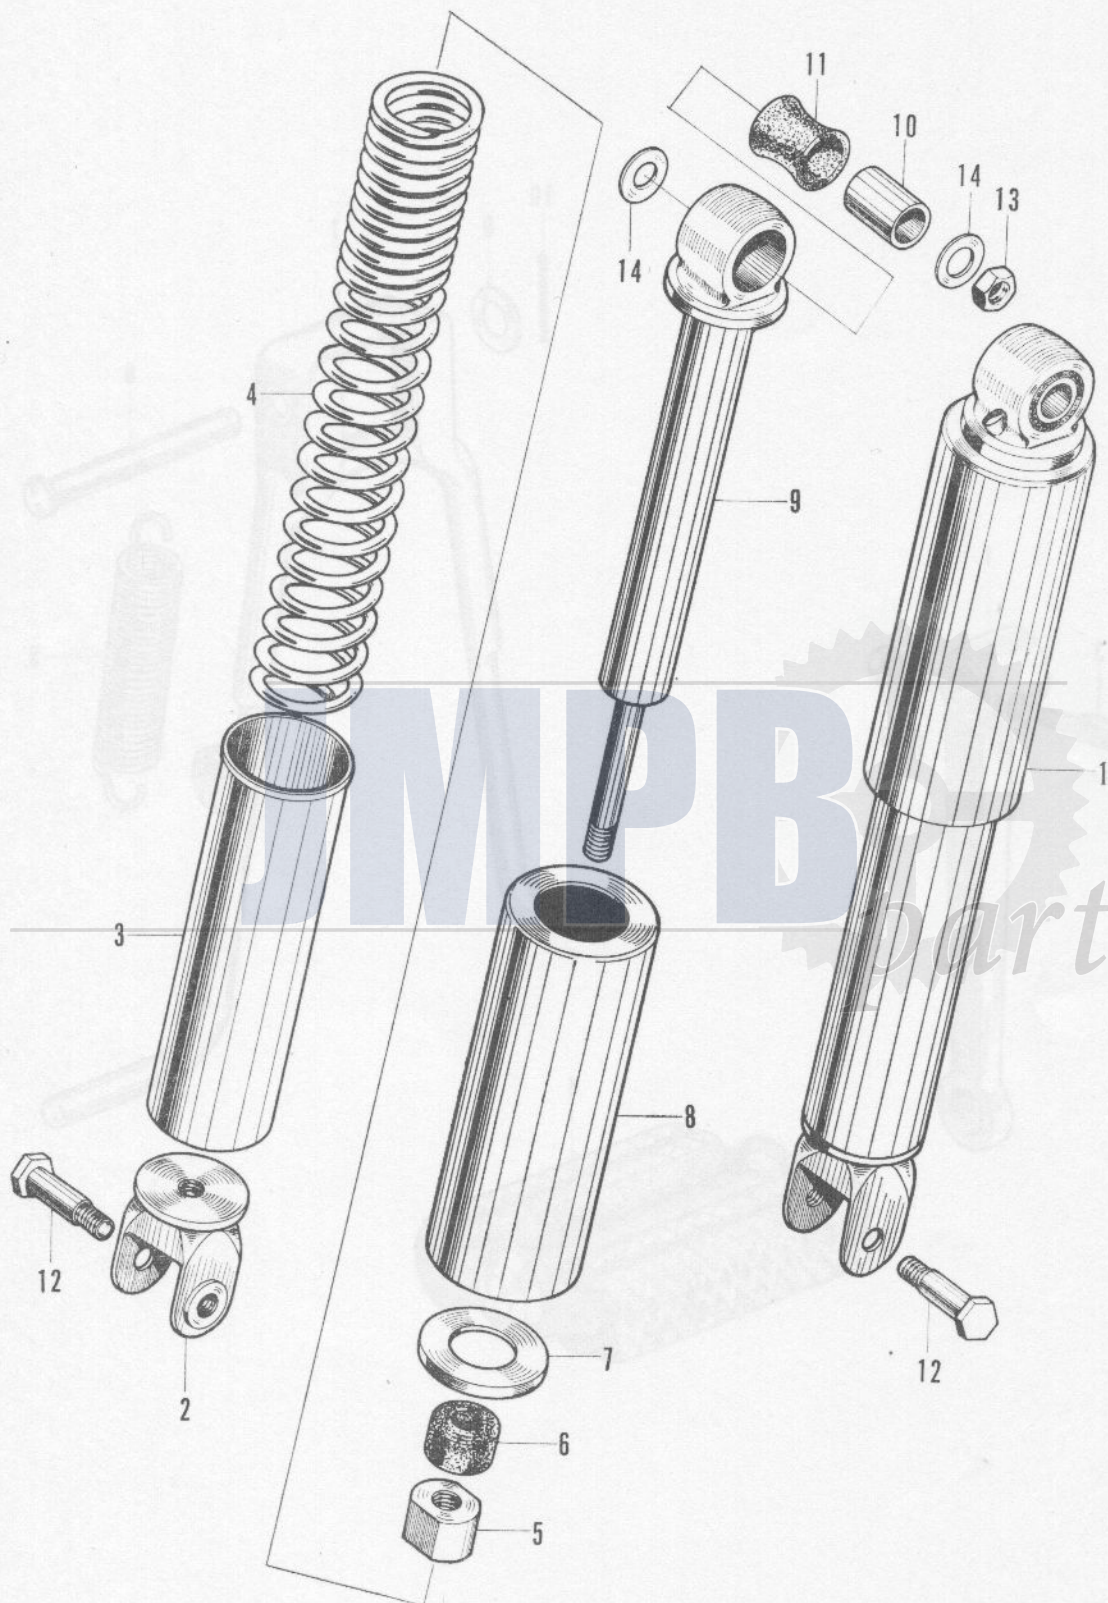



F-11 Rear Cushion

HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	52400-063-010D	CUSHION ASSY., rear (Columbia blue) (Used in General)	2	PC50-1000001		
	52400-063-010AW	CUSHION ASSY., rear (Bright red) ... (Used in General)	2	PC50-1000001		
	52400-063-691D	CUSHION ASSY., rear (Columbia blue) (Used in England, France)	2	PC50-1000001		
	52400-063-691AW	CUSHION ASSY., rear (Bright red) ... (Used in England, France)	2	PC50-1000001		
2	52420-063-010	JOINT, bottom, rear cushion	2	PC50-1000001		
3	52465-063-000XL	CASE, bottom, rear cushion	2	PC50-1000001		
		(Ivory white)				
4	52401-063-000	SPRING, rear cushion (Used in General)	2	PC50-1000001		
	52401-063-690	SPRING, rear cushion	2	PC50-1000001		
		(Used in England, France)				
5	52481-063-000	NUT, locking, rear cushion.....	2	PC50-1000001		
6	52475-001-040	RUBBER, stopper, rear cushion	2	PC50-1000001		
7	52407-063-000	SEAT, upper, rear cushion spring	2	PC50-1000001		
8	52460-011-000D	CASE, upper, rear cushion	2	PC50-1000001		
		(Columbia blue)				
	52460-011-000AW	CASE, upper, rear cushion (Bright red)	2	PC50-1000001		
9	52450-063-305	DAMPER, rear cushion	2	PC50-1000001		
10	52488-063-000	COLLAR, upper, rear cushion rubber...	2	PC50-1000001		
11	52485-001-020	BUSH, upper, rear cushion rubber.....	2	PC50-1000001		
12	92210-08030-0A	BOLT, hex., 8×30	2			
13	94001-10000-0S	NUT, hex., 10 mm	2			
14	94101-10000	WASHER, plain, 10 mm	4			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	43473-063-000	NUT, rear brake adjusting	1	PC50-1000001		
2	42301-063-010	AXLE, rear wheel	1	PC50-1000001		
3	42313-063-000	COLLAR, side, rear brake panel	1	PC50-1000001		
4	45133-044-000	SPRING, brake show.....	1	PC50-1000001		
5	45120-063-003	SHOE, brake (Fuji)	2	PC50-1000001		
6	43100-063-020	PANEL, rear brake.....	1	PC50-1000001		
7	43410-063-020	ARM, rear brake	1	PC50-1000001		
8	43141-063-010	CAM, rear brake	1	PC50-1000001		
9	42311-063-010	COLLAR, rear wheel side	1	PC50-1000001		
10	41201-063-040	SPROCKET, final driven (31T)	1	PC50-1000001		
● 11	42603-063-000	SEAL, dust, rear wheel hub	1	Not applied		8003
12	41241-063-000	DAMPER, rear wheel	6	PC50-1000001		
13	90752-044-000	OIL-SEAL, 17326	2	PC50-1000001		
14	42620-063-010	COLLAR, distance, rear axle	1	PC50-1000001		
15	42601-063-020	HUB, rear wheel.....	1	PC50-1000001		
16	42711-063-003	TIRE, rear wheel (Bridgestone)	1	PC50-1000001		
	42711-063-006	TIRE, rear wheel (Nitto)	1	PC50-1000001		
17	44712-063-000	TUBE, wheel	1	PC50-1000001		
18	44713-063-000	FRAP, tire	1	PC50-1000001		
19	42701-063-003	RIM, rear wheel (Daido)	1	PC50-1000001		
20	92000-05022-0A	BOLT, hex., 5×22	1			
21	94001-05000-0S	NUT, hex., 5 mm	1			
22	94001-12000-0S	NUT, hex., 12 mm	1			
23	94511-38000	CIR-CLIP, external, 38 mm	1			
24	96100-62010	BEARING, ball, 6201.....	1			
25	96140-62010	BEARING, ball, 6201R	1			
26	97197-212351	SPORK A, # 12×197.5	18			
27	97324-212341	SPORK A, # 12×197	18			
● 28	42315-063-303	COLLAR, inner, rear wheel	1	PC50-1000001		8003
● 29	42621-063-303	COLLAR, distance, left rear axle	1	PC50-1000001		8003

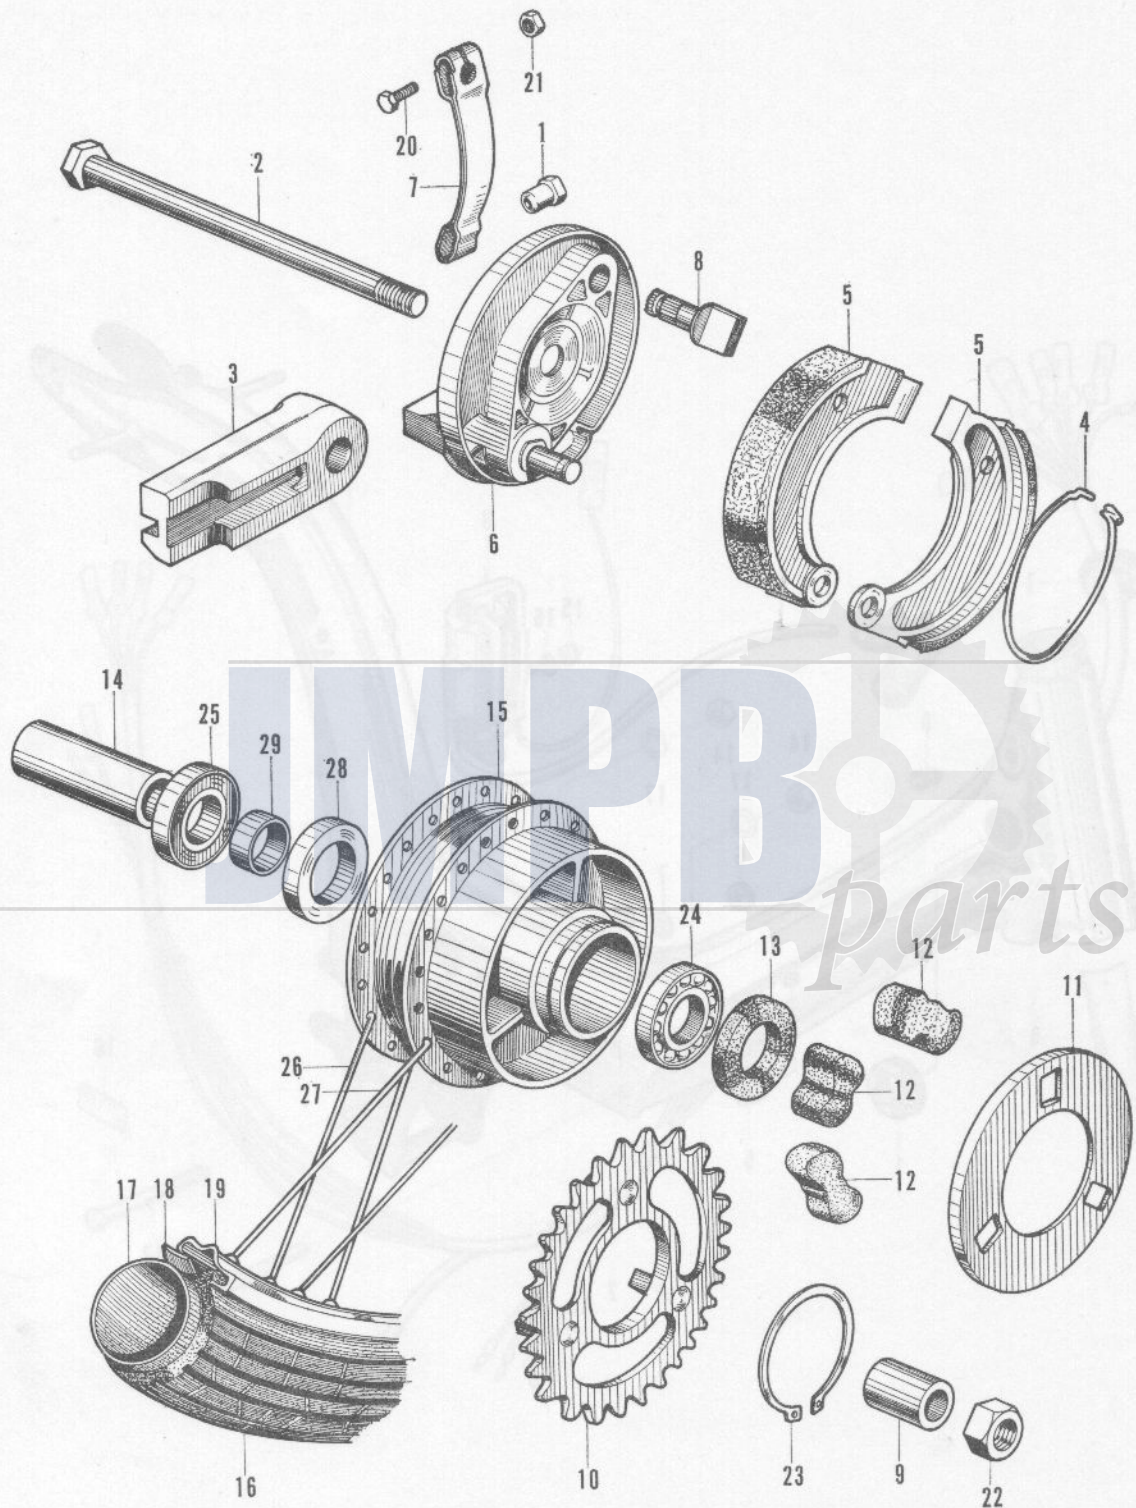

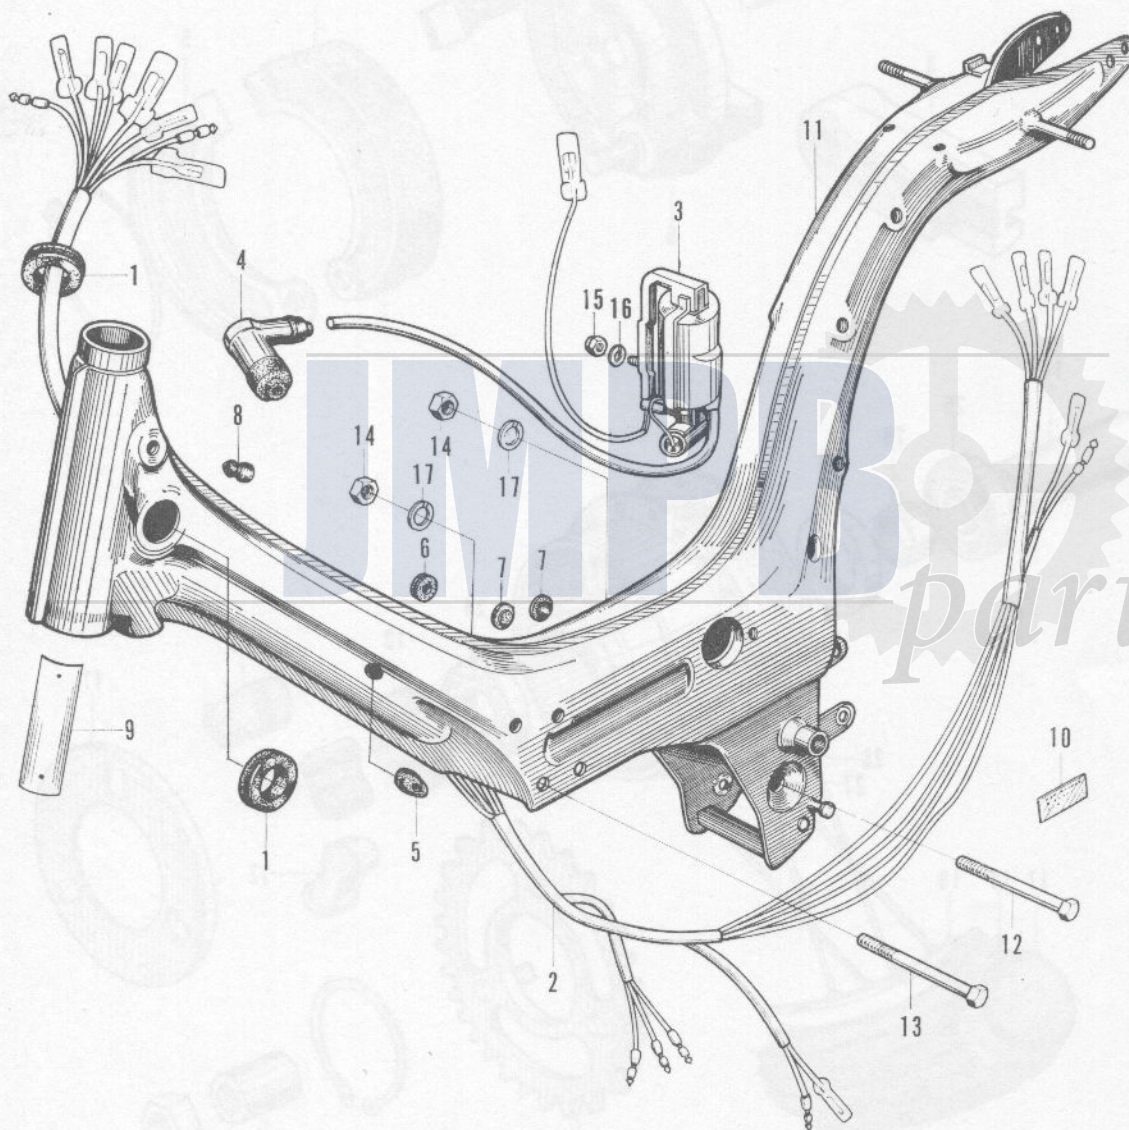



F-13 Frame Body • Wire Harness

HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	32983-044-010	GROMMET, wire cord.....	2	PC50-1000001		
2	32100-063-000	HARNNESS, wire (Used in General) ...	1	PC50-1000001		
	32100-063-620	HARNNESS, wire (Used in France) ...	1	PC50-1000001		
	32100-063-690	HARNNESS, wire (Used in England) ...	1	PC50-1000001		
3	30500-063-004	COIL, ignition	1	PC50-1000001		
4	30700-063-681	CAP ASSY., noise suppresser	1	PC50-1000001		
5	17911-023-000	GROMMET, throttle wire	1	PC50-1000001		
6	50163-063-000	GROMMET, feed tube	1	PC50-1000001		
7	50164-063-000	CAP, change cable hole	2	PC50-1000001		
8	50162-063-000	GROMMET, screw hole	2	PC50-1000001		
9	87125-253-680	PLATE A, name.....	1	PC50-1000001		
10	87501-063-620	PLATE, registerd number	1	PC50-1000001		
		(Used in France)				
11	50100-063-010D	BODY, frame (Columbia blue)	1	PC50-1000001		
		(Used in General, England)				
	50100-063-010AW	BODY, frame (Bright red)	1	PC50-1000001		
		(Used in General, England)				
	50100-063-010Z	BODY, frame (Non sanding)	1	PC50-1000001		
		(Used in General, England)				
	50100-063-620D	BODY, frame (Columbia blue)	1	PC50-1000001		
		(Used in France)				
	50100-063-620AW	BODY, frame (Bright red)	1	PC50-1000001		
		(Used in France)				
	50100-063-620Z	BODY, frame (Non sanding)	1	PC50-1000001		
		(Used in France)				
12	92000-08080-0A	BOLT, hex., 8×80	1			
● 13	92000-08085-0A	BOLT, hex., 8×83	1			
14	94001-08000-0S	NUT, hex., 8 mm	2			
15	94021-06020-0S	NUT, blind, 6 mm	1			
16	94111-06000	WASHER, spring, 6 mm	1			
17	94111-08000	WASHER, spring, 8 mm	2			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	33100-044-000	LIGHT ASSY., head (Used in General, England)	1	PC50-1000001		
	33100-044-620	LIGHT ASSY., head (Hakkosha) (Used in France)	1	PC50-1000001		
	33100-044-621	LIGHT ASSY., head (Stanley) (Used in France)	1	PC50-1000001		
2	33121-044-000	LENS, head light.....	1	PC50-1000001		
3	34901-044-000	BULB, head light..... (Used in General, England)	1	PC50-1000001		
4	33130-044-000	SOCKET, head light (Used in General, England)	1	PC50-1000001		
	33130-044-620	SOCKET, head light (Hakkosha) (Used in France)	1	PC50-1000001		
	33130-044-621	SOCKES, head light (Stanley)..... (Used in France)	1	PC50-1000001		
5	90559-044-000	WASHER B, light case setting (Used in General, England)	1	PC50-1000001		
6	34902-044-000	EARTH, head light (Used in General, England)	1	PC50-1000001		
7	90152-044-000	SCREW, head light set.....	1	PC50-1000001		
8	44830-063-010	CABLE, speedometer.....	1	PC50-1000001		
9	44831-063-010	CABLE, speedometer inner.....	1	PC50-1000001		
10	37200-064-018	SPEEDOMETER (km/h) (Nippon Seiki) (Used in General, France)	1	PC50-1000001		
	37200-064-681	SPEEDOMETER, (MPH) (Nippon Seiki) (Used in General, England)	1	PC50-1000001		
11	35100-044-030	SWITCH, lighting (Used in General, England)	1	PC50-1000001		
● 12	61301-044-010XL	CASE, head light (Ivory white).....	1	PC50-1000001		8002
13	33700-063-003	LIGHT ASSY., tail (Stanley) (Used in General)	1	PC50-1000001		
	33700-063-621	LIGHT ASSY., tail (Stanley) (Used in France)	1	PC50-1000001		
14	33701-063-003	LENS, tail light (Stanley) (Used in General, France)	1	PC50-1000001		
15	34906-044-000	BULB, tail light (6V $\frac{2}{6}$ W)..... (Used in General)	1	PC50-1000001		

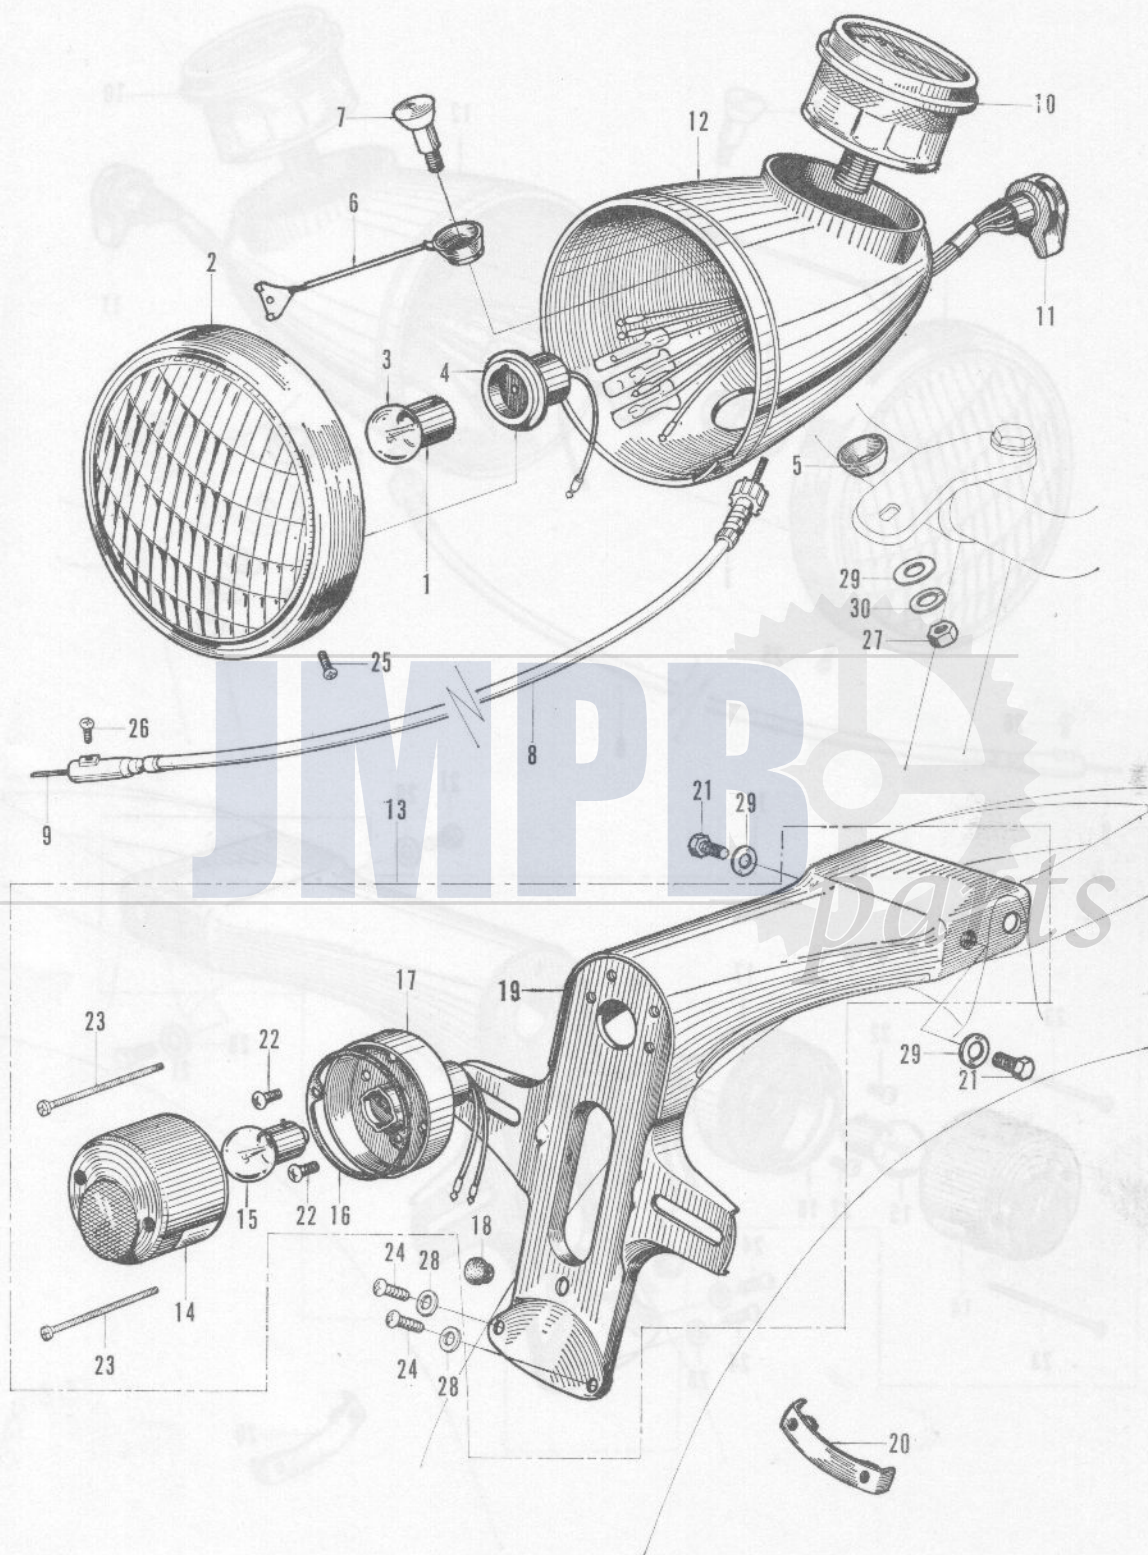

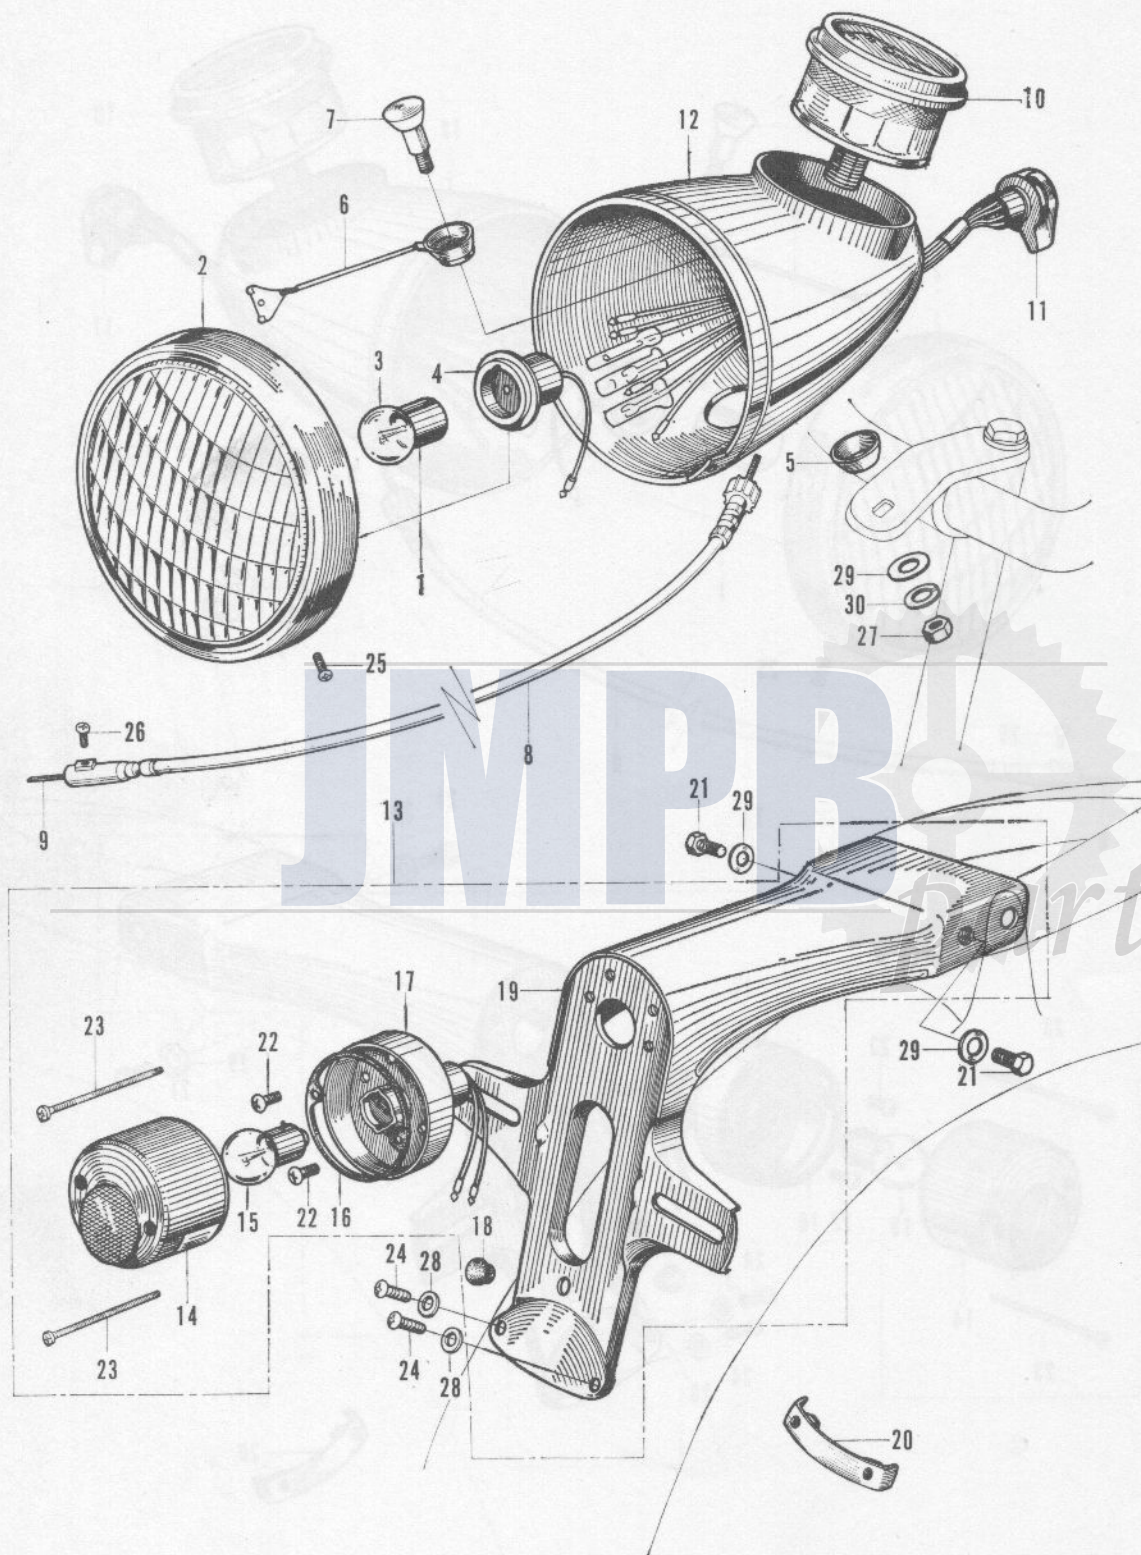


F-14 Head Light • Tail Light


HONDA

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
16	33705-063-003	COLLAR, tail lens set (Stanley)..... (Used in General, France)	1	PC50-1000001		
17	33703-063-013	SOCKET, tail light (Stanley) (Used in General)	1	PC50-1000001		
	33703-063-622	SOCKET, tail light (Stanley) (Used in France)	1	PC50-1000001		
18	33711-044-000	RUBBER, number bracket shock (Used in General, France)	1	PC50-1000001		
19	84701-063-013T	BRACKET, number plate (Metallic silver) (Stanley • Used in General)	1	PC50-1000001		
	84701-063-622T	BRACKET, number plate (Metallic Silver) (Stanley • Used in France)	1	PC50-1000001		
20	80109-063-000	PLATE, tail light nut	1	PC50-1000001		
21	92000-06012	BOLT, hex., 6×12	2			
22	93500-03006-0A	SCREW, pan, 3×6	2			
23	93500-03042-0A	SCREW, pan, 3×42	2			
24	93500-05012-0A	SCREW, pan, 5×12	2			
25	93700-03010	SCREW, pan, 3×10	1			
26	93500-04006	SCREW, pan, 4×6	1			
● 27	90345-044-000	NUT, head light case setting	1	PC50-1000001		8001
28	94101-05000	WASHER, plain, 5 mm	2			
29	94101-06000	WASHER, plain, 6 mm	3			
30	94111-06000	WASHER, spring, 6 mm	1			

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	33700-063-601	LIGHT ASSY., tail.....	1	PC50-1000001		
2	33701-268-830	LENS, tail light	1	PC50-1000001		
3	34906-202-830	BULB, tail light	1	PC50-1000001		
4	33709-268-810	PACKING, tail light lens	1	PC50-1000001		
5	33703-063-600	SOCKET, tail light.....	1	PC50-1000001		
6	33705-044-600	PLATE, lens holder	1	PC50-1000001		
7	84701-063-601T	BRACKET, number plate (Metallic Silver)	1	PC50-1000001		
8	80112-044-600	PLATE B, tail light setting	2	PC50-1000001		
9	93500-04010-0A	SCREW, pan, 4×10	2			
10	93700-03060-0A	SCREW, oval, 3×60	2			

JMPB parts

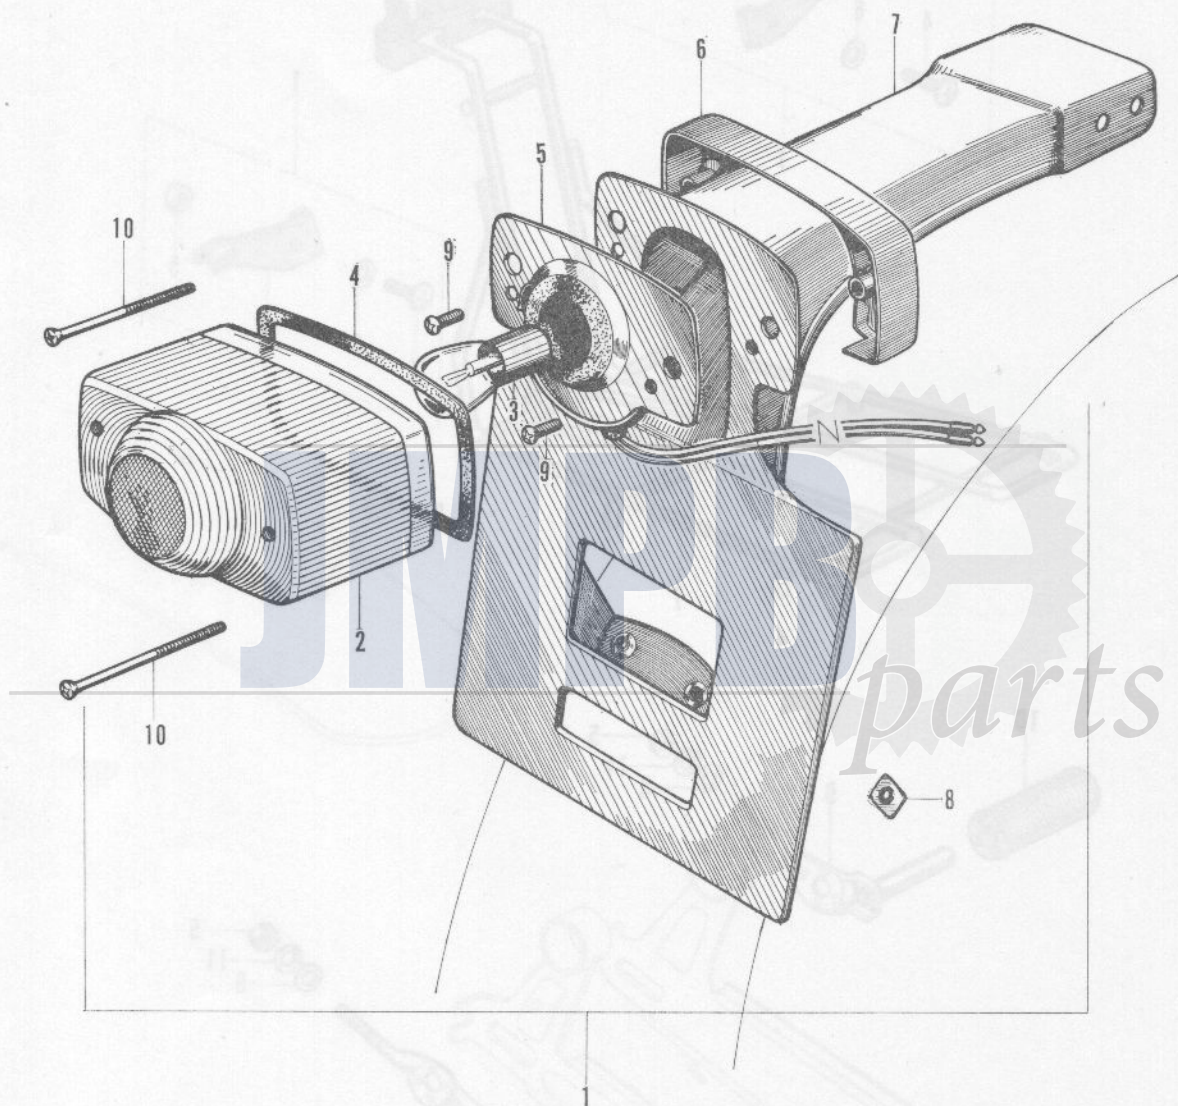

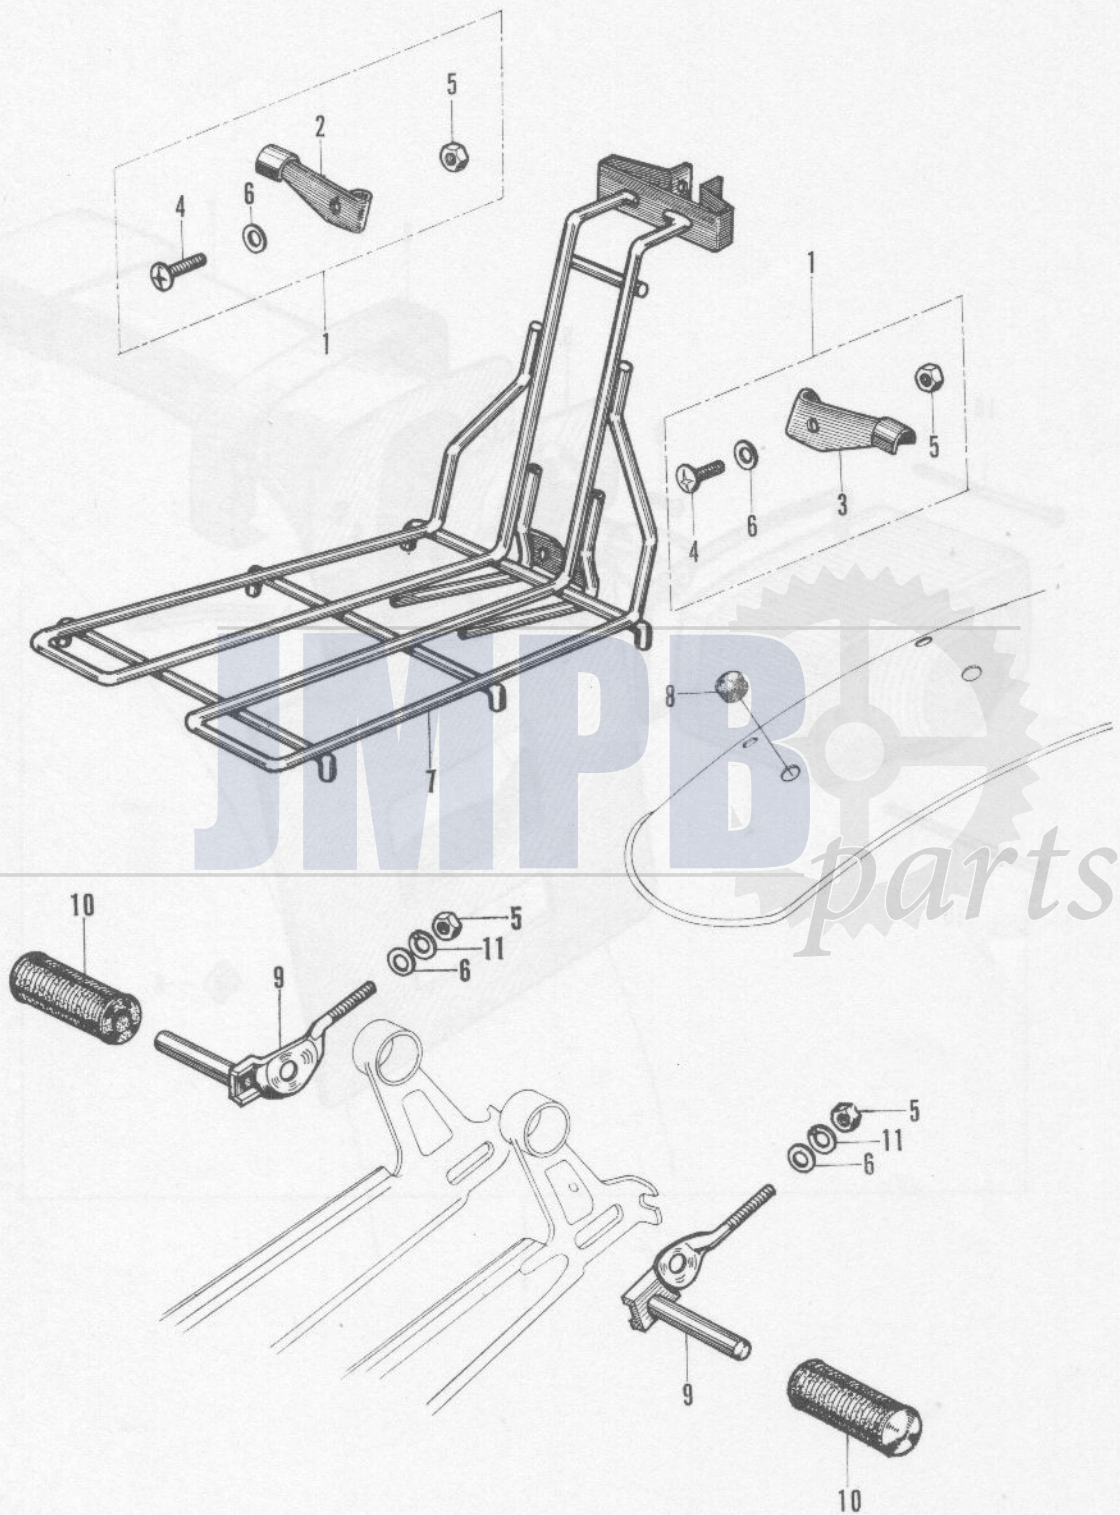

F-16 Basket Hook • Pillion Step (Optional Parts) **HONDA**

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	06800-04410	HOOK-KIT, basket	1			
2	81222-044-811	HOOK, right basket	1	PC50-1000001		
3	81223-044-810	HOOK, left basket	1	PC50-1000001		
	81221-044-811	HOOK A, basket	1	PC50-1000001		
4	93500-06012	SCREW, pan, 6×12	2			
5	94001-06000	NUT, hex., 6 mm	4			
6	94101-06000	WASHER, plain, 6 mm	4			
7	81200-044-010XL	CARRIER, front (Ivory white)	1	PC50-1000001		
8	61105-063-810	PLUG, front fender (Used in England)...	4	PC50-1000001		
9	40543-064-690	ADJUSTER, drive chain	2	PC50-1000001		
10	50731-001-810	RUBBER, pillion step	2	PC50-1000001		
11	94111-06000	WASHER, spring, 6 mm	2			

JMPB
parts

PART NO. INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
00000 Parts		14000 Parts		16265-063-000..... 4		23221-063-040.....16	
06800-04410.....59		14100-044-030..... 4		16266-063-000..... 4		23226-063-700.....16	
11000 Parts		14120-044-020..... 4		16267-063-000..... 4		23801-063-000.....16	
11100-063-020.....20		14311-063-310.....12		16268-063-000..... 4		23802-040-000.....16	
● 11100-063-030.....20		14315-044-010.....11		16950-044-004.....39		23805-063-010.....16	
11116-063-300..... 7		14401-044-000..... 7		16953-044-004.....39		24000 Parts	
● 11116-063-310..... 7		14431-044-030..... 3		16958-044-004.....39		24111-044-010.....16	
11117-063-300..... 7		14451-044-000..... 3		16960-044-004.....39		24611-063-700..... 8	
● 11117-063-330..... 7		14481-044-000..... 3		16962-044-004.....39		24612-063-000..... 8	
11120-063-310..... 7		14711-044-680..... 4		16963-044-004.....39		24615-044-010..... 8	
● 11120-063-320..... 7		14721-044-682..... 4		16997-044-004.....39		24621-044-020.....16	
● 11122-044-310..... 7		14751-044-000..... 4		17000 Parts		28000 Parts	
11130-063-020..... 7		14771-044-000..... 4		17133-063-010.....20		28239-063-010.....19	
● 11141-063-300..... 7		14772-044-000..... 4		17200-063-030D35		28252-064-000..... 8	
11191-063-010.....20		14777-044-010..... 4		17200-063-030AW ...35		28803-063-010.....19	
11201-063-020.....20		14781-044-000..... 4		● 17205-063-020.....35		28806-063-010.....19	
11331-063-020..... 8		14945-063-010..... 4		17225-063-020D35		28807-063-000.....19	
11332-063-000..... 8		14950-063-020.....24		17225-063-020AW ...35		28808-063-010.....19	
11394-063-010..... 8		15000 Parts		17227-063-010.....35		28809-063-010.....19	
11431-063-000.....15		15420-044-060..... 7		17251-063-010.....35		● 28810-063-020.....19	
12000 Parts		● 15420-063-000..... 7		17253-063-010.....35		28811-063-050.....19	
12021-044-000..... 4		15650-063-000..... 8		17255-063-000.....35		30000 Parts	
12023-044-000..... 4		16000 Parts		17260-063-020D35		30202-063-004.....15	
12101-063-010..... 7		16100-063-004.....23		17260-063-020AW ...35		30205-044-014.....15	
12191-063-000..... 7		16118-063-004.....23		17500-063-030D39		30207-063-004.....15	
12200-063-000..... 4		16119-063-004.....23		17500-063-030AW ...39		30208-063-004.....15	
12203-063-310..... 4		16122-063-004.....23		17620-041-000.....39		30209-063-004.....15	
12204-063-000..... 4		16126-063-004.....23		17631-001-000.....39		30500-063-004.....51	
12206-044-300..... 4		16127-063-004.....23		17910-063-020.....24		30541-063-004.....15	
12251-044-020..... 4		16133-063-004.....23		17911-023-000.....51		30700-063-681.....51	
12301-063-000..... 3		16141-063-004.....23		17911-044-000.....24		31000 Parts	
12360-063-000..... 3		16151-063-004.....23		18000 Parts		31100-063-004.....15	
12391-044-030..... 3		16156-044-004.....23		18291-044-020.....43		31100-063-601.....15	
12401-063-303..... 3		16157-044-004.....23		18300-063-000.....43		31100-063-621.....15	
13000 Parts		16162-044-004.....23		18300-063-620.....43		31121-063-004.....15	
13000-063-020.....12		16163-063-004.....23		22000 Parts		31121-063-601.....15	
13010-044-000..... 7		16164-040-004.....23		22100-063-000.....11		31121-063-621.....15	
13101-044-030..... 7		16171-044-004.....23		22131-044-020.....11		31632-063-004.....15	
13111-044-010..... 7		16173-063-004.....23		22201-044-050.....11		31632-063-601.....15	
13115-001-000..... 7		16178-548-004.....23		22300-044-000.....11		31632-063-621.....15	
13201-063-300.....12		16181-001-004.....23		22802-044-000.....11		32000 Parts	
13211-044-030.....12		16181-250-004.....23		23000 Parts		32100-063-000.....51	
13311-063-310.....12		16185-044-004.....23		23110-063-000.....11		32100-063-690.....51	
13321-063-310.....12		16189-056-004.....23		23211-063-010.....16			
13381-063-300.....12		16194-063-004.....23					
		16196-063-004.....23					
		16197-063-004.....23					
		16199-063-004.....23					

PART NO. INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
32100-063-620.....51		40235-044-000.....44		45000 Parts		52400-063-010AW ...47	
32956-063-300.....15		40510-063-000XL ...40		45100-063-010.....32		52400-063-691D47	
32957-063-010.....15		40512-063-000.....40		45120-063-003... 32, 48		52400-063-691AW ...47	
32958-044-000.....15		40530-063-003.....40		45131-063-000.....32		52401-063-000.....47	
32983-044-010.....51		40531-063-003.....40		45133-044-000... 32, 48		52401-063-690.....47	
33000 Parts		40543-063-000.....40		45410-063-000.....32		52407-063-000.....47	
33100-044-000.....52		40543-064-690.....59		45450-063-010.....24		52420-063-010.....47	
33100-044-620.....52		41000 Parts		50000 Parts		52450-063-305.....47	
33100-044-621.....52		41201-063-040.....48		50100-063-010D51		52460-011-000D47	
33121-044-000.....52		41241-063-000.....48		50100-063-010AW ...51		52460-011-000AW ...47	
33130-044-000.....52		42000 Parts		50100-563-010Z51		52465-063-000XL ...47	
33130-044-620.....52		42301-063-010.....48		50100-063-620D51		52475-001-040.....47	
33130-044-621.....52		42311-063-010.....48		50100-063-620AW ...51		52476-063-000.....40	
33700-063-003.....52		42313-063-000.....48		50100-063-620Z51		52481-063-000.....47	
33700-063-601.....56		● 42315-063-303.....48		50162-063-000.....51		52485-001-020.....47	
33700-063-621.....52		42601-063-020.....48		50163-063-000.....51		52486-063-000.....40	
33701-063-003.....52		42620-063-010.....48		50164-063-000.....51		52488-063-000.....47	
33701-268-830.....56		● 42621-063-303.....48		50301-044-020.....28		53000 Parts	
33703-063-013.....55		42701-063-003.....48		50302-044-000.....28		53100-063-010.....27	
33703-063-600.....56		42711-063-003.....48		50500-063-010B44		53104-044-000.....24	
33703-063-622.....55		42711-063-006.....48		50522-044-010.....44		53109-044-000.....24	
33705-044-600.....56		43000 Parts		50731-001-810.....59		53141-044-010.....24	
33705-063-003.....55		43100-063-020.....48		51000 Parts		53161-044-000.....24	
33709-268-810.....56		43141-063-010.....48		51100-044-070D28		53162-063-000.....24	
33711-044-000.....55		43410-063-020.....48		51100-044-070AW ...28		53163-044-010.....24	
34000 Parts		43450-063-040.....24		51100-044-070Z28		53165-063-000XL ...24	
34901-044-000.....52		43450-063-692.....24		51210-063-000.....31		53166-063-000XL ...24	
34902-044-000.....52		43473-063-000.....48		51211-044-000.....31		53175-063-000XL ...24	
34906-044-000.....52		44000 Parts		51213-044-000.....31		53178-063-000XL ...24	
34906-202-830.....56		44301-063-000.....32		51220-063-000.....31		53181-063-000XL ...24	
35000 Parts		44311-044-020.....32		51221-044-000.....31		53211-044-010.....28	
35100-044-030.....52		44601-063-000.....32		51223-044-000.....31		53212-044-000.....28	
35300-063-010.....24		44620-044-000.....32		51231-044-000.....31		53600-044-000.....28	
37000 Parts		44701-044-690.....32		51400-063-000.....31		61000 Parts	
37200-064-018.....52		44711-063-003.....32		51401-044-050.....31		61100-044-030XL ...28	
37200-064-681.....52		44711-063-006.....32		51402-044-030.....31		61100-063-600XL ...28	
38000 Parts		44712-063-000... 32, 48		51403-063-000.....31		61102-063-000.....28	
38100-044-680.....24		44713-063-000... 32, 48		51404-044-030.....28		61105-063-810.....59	
40000 Parts		44805-044-690.....32		51405-044-690.....31		61117-001-010.....28	
40220-063-010.....44		44806-044-690.....32		52000 Parts		61131-063-600B28	
40225-063-005.....44		44809-044-000.....32		52100-630-000D40		● 61301-044-010XL ...52	
		44830-063-010.....52		52100-063-000AW ...40		77000 Parts	
		44831-063-010.....52		52100-063-000Z40		77100-063-010A36	
				52108-023-000.....40		77211-063-000.....36	
				52161-001-010XL ...40			
				52400-063-010D47			

PART NO. INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
77300-063-010B36		90000 Parts		91203-035-000.....16			
77312-063-000.....36				91204-063-003.....8, 19			
77500-063-020B36				91211-044-000.....20			
80000 Parts				91212-063-005..... 8			
80100-063-000XL ...43				91302-044-010..... 4			
80100-063-620XL ...43				91311-044-000..... 8			
80109-063-000.....55				99000 Parts			
80112-044-600.....56				99114-063-050023			
81000 Parts				99114-063-052023			
81200-063-020D36				99114-063-055023			
81200-063-020AW ...36				99114-063-058023			
81200-063-020Z36				99114-063-060023			
81200-044-010XL ...59							
81211-044-000.....27							
81213-063-000.....24							
81221-044-811.....59							
81222-044-811.....59							
81223-044-810.....59							
83000 Parts							
83513-044-000.....36							
83517-063-000.....36							
83600-063-010D39							
83600-063-010AW ...39							
83650-063-000.....39							
84000 Parts							
84701-063-013T55							
84701-063-601T56							
84701-063-622T55							
87000 Parts							
87121-063-010.....39							
87122-063-010.....39							
87125-253-680.....51							
87501-063-620.....51							
88000 Parts							
88100-063-000.....24							
89000 Parts							
89101-063-000.....36							
		91000 Parts					
		91101-205-010.....12					

HONDA MOTOR CO., LTD.
JMPB

parts

PRINTED IN JAPAN

'68 5. Q-A 3500